



SCAG[®]

POWER EQUIPMENT

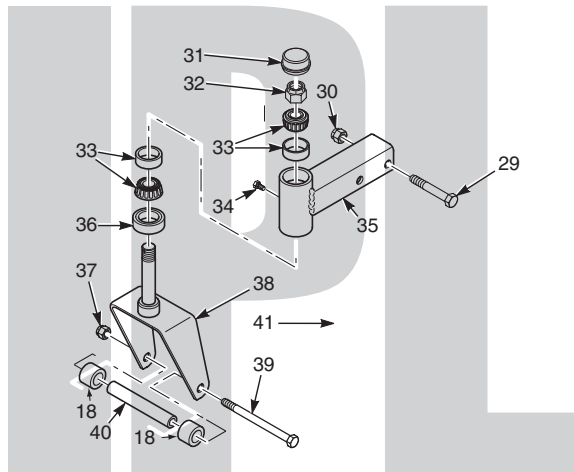

ILLUSTRATED PARTS MANUAL

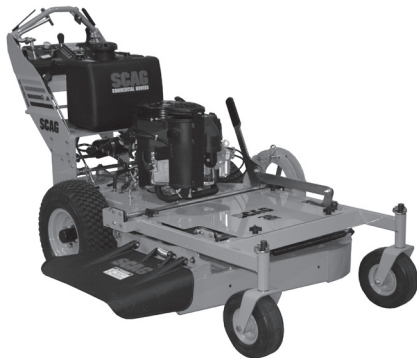

Model SWZT Walk-Behind

THIS MANUAL CONTAINS THE ILLUSTRATED PARTS LIST FOR MODELS:

SWZT36-14FS

SWZT48-15FS

SWZT52-18FS

SWZT52-18FSE

SWZT61-22FSE

with a serial number of M9000001 to M9099999

with a serial number of M9100001 to M9199999

with a serial number of M9200001 to M9299999


with a serial number of M9300001 to M9399999

with a serial number of M9400001 to M9499999

Table of Contents

36" CUTTER DECK.....	2
48" CUTTER DECK.....	4
52" CUTTER DECK.....	6
61" CUTTER DECK.....	8
CUTTER DECK CONTROLS	10
ENGINE DECK & HYDRAULIC SYSTEM.....	12
STEERING CONTROLS.....	14
BRAKE COMPONENTS	16
ELECTRICAL SYSTEM AND THROTTLE CONTROL - MANUAL START	18
ELECTRICAL SYSTEM AND THROTTLE CONTROL - ELECTRIC START	20
SWZT FUEL SYSTEM.....	22
ZT-2800 HYDRAULIC AXLE ASSEMBLY	24
REPLACEMENT DECALS AND INFORMATION PLATES	26
SWZT ELECTRICAL SCHEMATIC - MANUAL START	28
SWZT ELECTRICAL SCHEMATIC - ELECTRIC START	29

36" CUTTER DECK

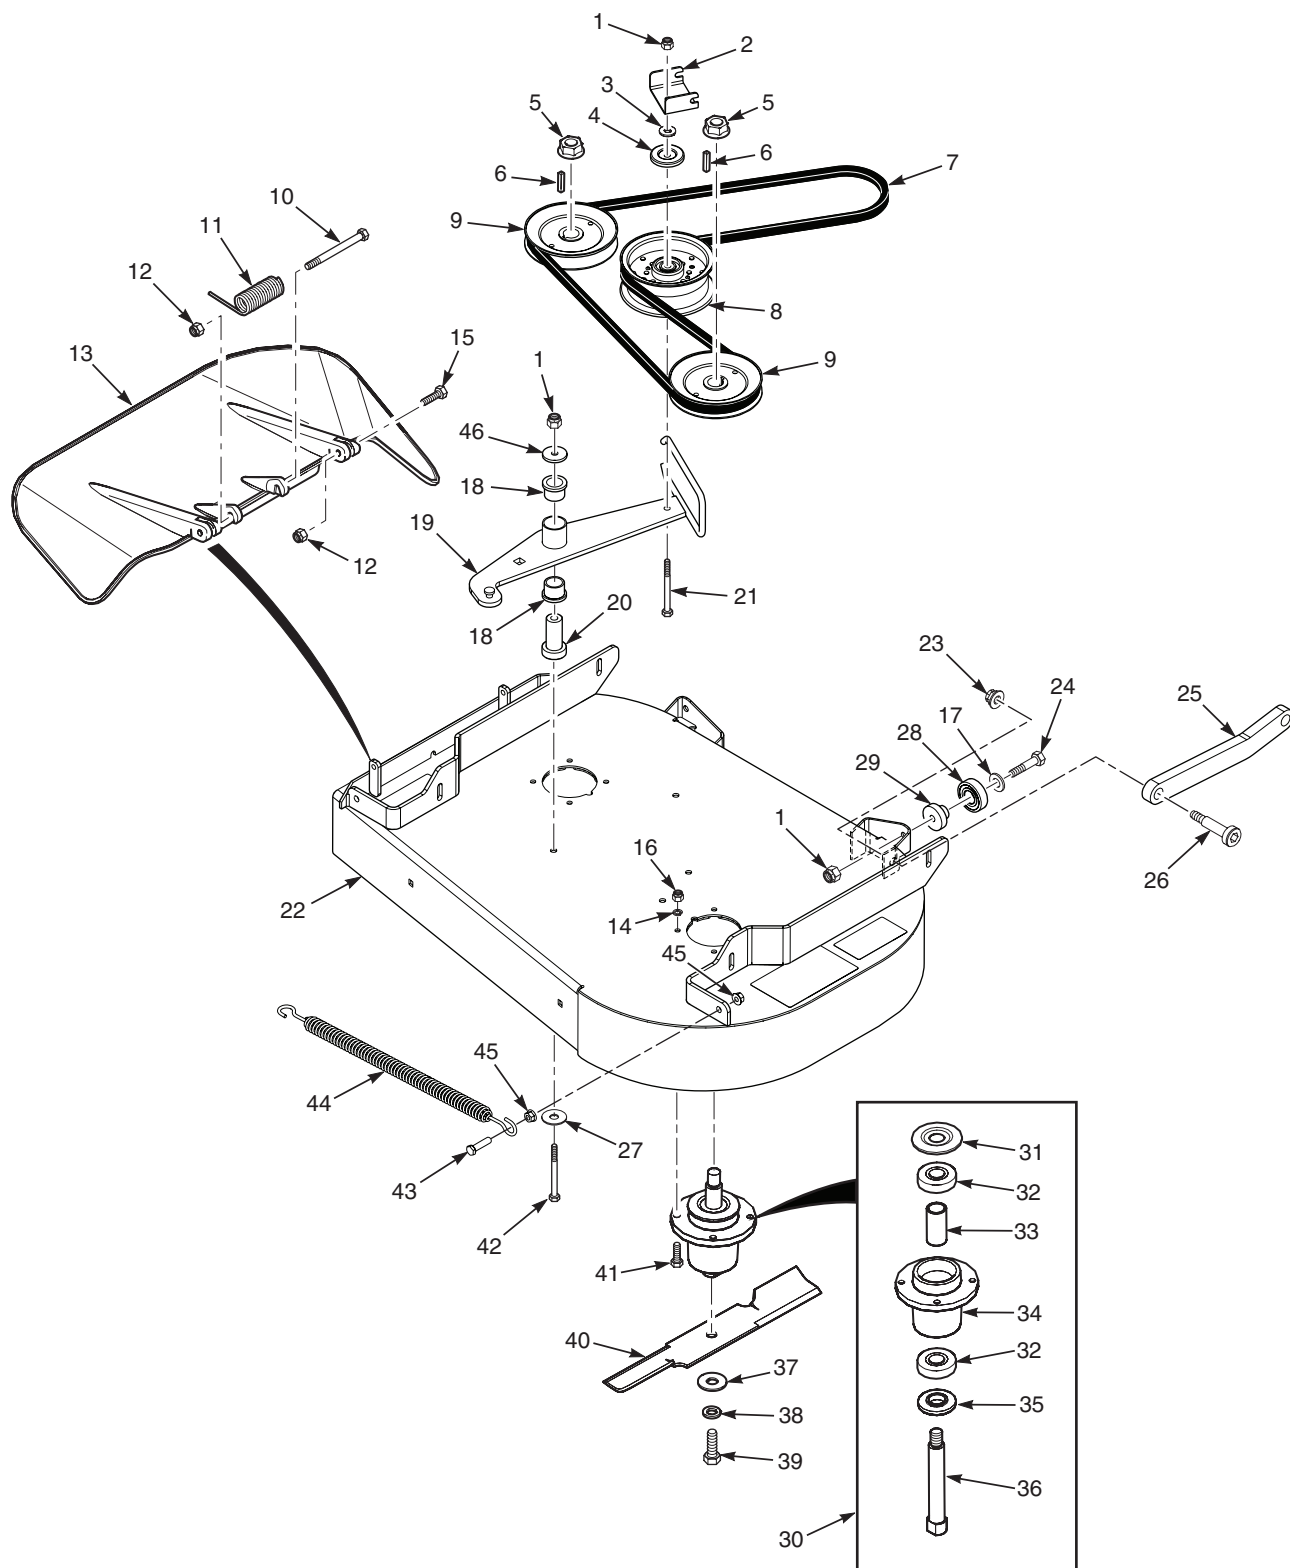

2018 SWZT 36CD


36" CUTTER DECK

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	424615	Bracket, Belt Guide
3	04043-04	Flatwasher, 3/8-.391 x .938 x .105
4	424367	Dust Shield
5	04112-06	Nut, 3/4-16 Spiral Lock
6	04063-01	Key, 1/4 x 1/4 x 1-1/4"
7	484619	Belt, Cutter Deck
8	483851	Pulley, 5" Idler
9	483324	Pulley, 5.73" OD - 25mm Bore
10	04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"
11	482245	Spring, Discharge Chute
12	04021-10	Nut, Elastic Stop 5/16-18
13	462031	Discharge Chute Assembly
*	462472	CA Discharge Chute
*	425872	Turbo Baffle
14	04030-03	Lockwasher, 5/16 Spring
15	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
16	04021-22	Nut, Elastic Stop 5/16-18 Gr.8
17	04043-04	Flatwasher, 3/8-.391 x .938 x .105 Hardened
18	483453-03	Bearing, Plastic
19	462190	Idler Arm (incl. item #18)
20	43708	Pivot, Idler
21	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
22	462977	Cutter Deck w/Decals, SMWZT-36

Ref. No.	Part No.	Description
23	04117-02	Nut, Elastic Flange 3/8-16
24	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
25	425959	Pusharm
26	04009-10	Bolt, Shoulder 1/2 x 3/8-16 x 2-3/4"
27	04041-38	Flatwasher, 3/8-.406 x 2.25" x .188
28	483379	Bearing
29	431046	Spacer, Bearing
30	461950	Spindle Assembly
31	483304	Debris Shield
32	483303	Bearing
33	43693	Spacer, Bearing
34	462014	Spindle Housing Assembly (incl. item #32, 33)
35	43694	Protector, Bearing
36	43695	Shaft, Spindle
37	04043-06	Flatwasher, 5/8-11 x 1-1/2"
38	04030-07	Lockwasher, 1/2 Spring
39	04001-121	Bolt, Hex Head 5/8-11 x 1-1/2"
40	482878	Cutter Blade, 18"
41	04001-175	Bolt, Hex Head 5/16-18 x 1-1/2" Gr.8
42	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"
43	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr.8
44	483375	Spring, Idler
45	04019-04	Nut, Serrated Flange 3/8-16
46	04041-11	Flatwasher, 3/8-.406 x 1-1/2"

* = California Models Only (not shown)

48" CUTTER DECK

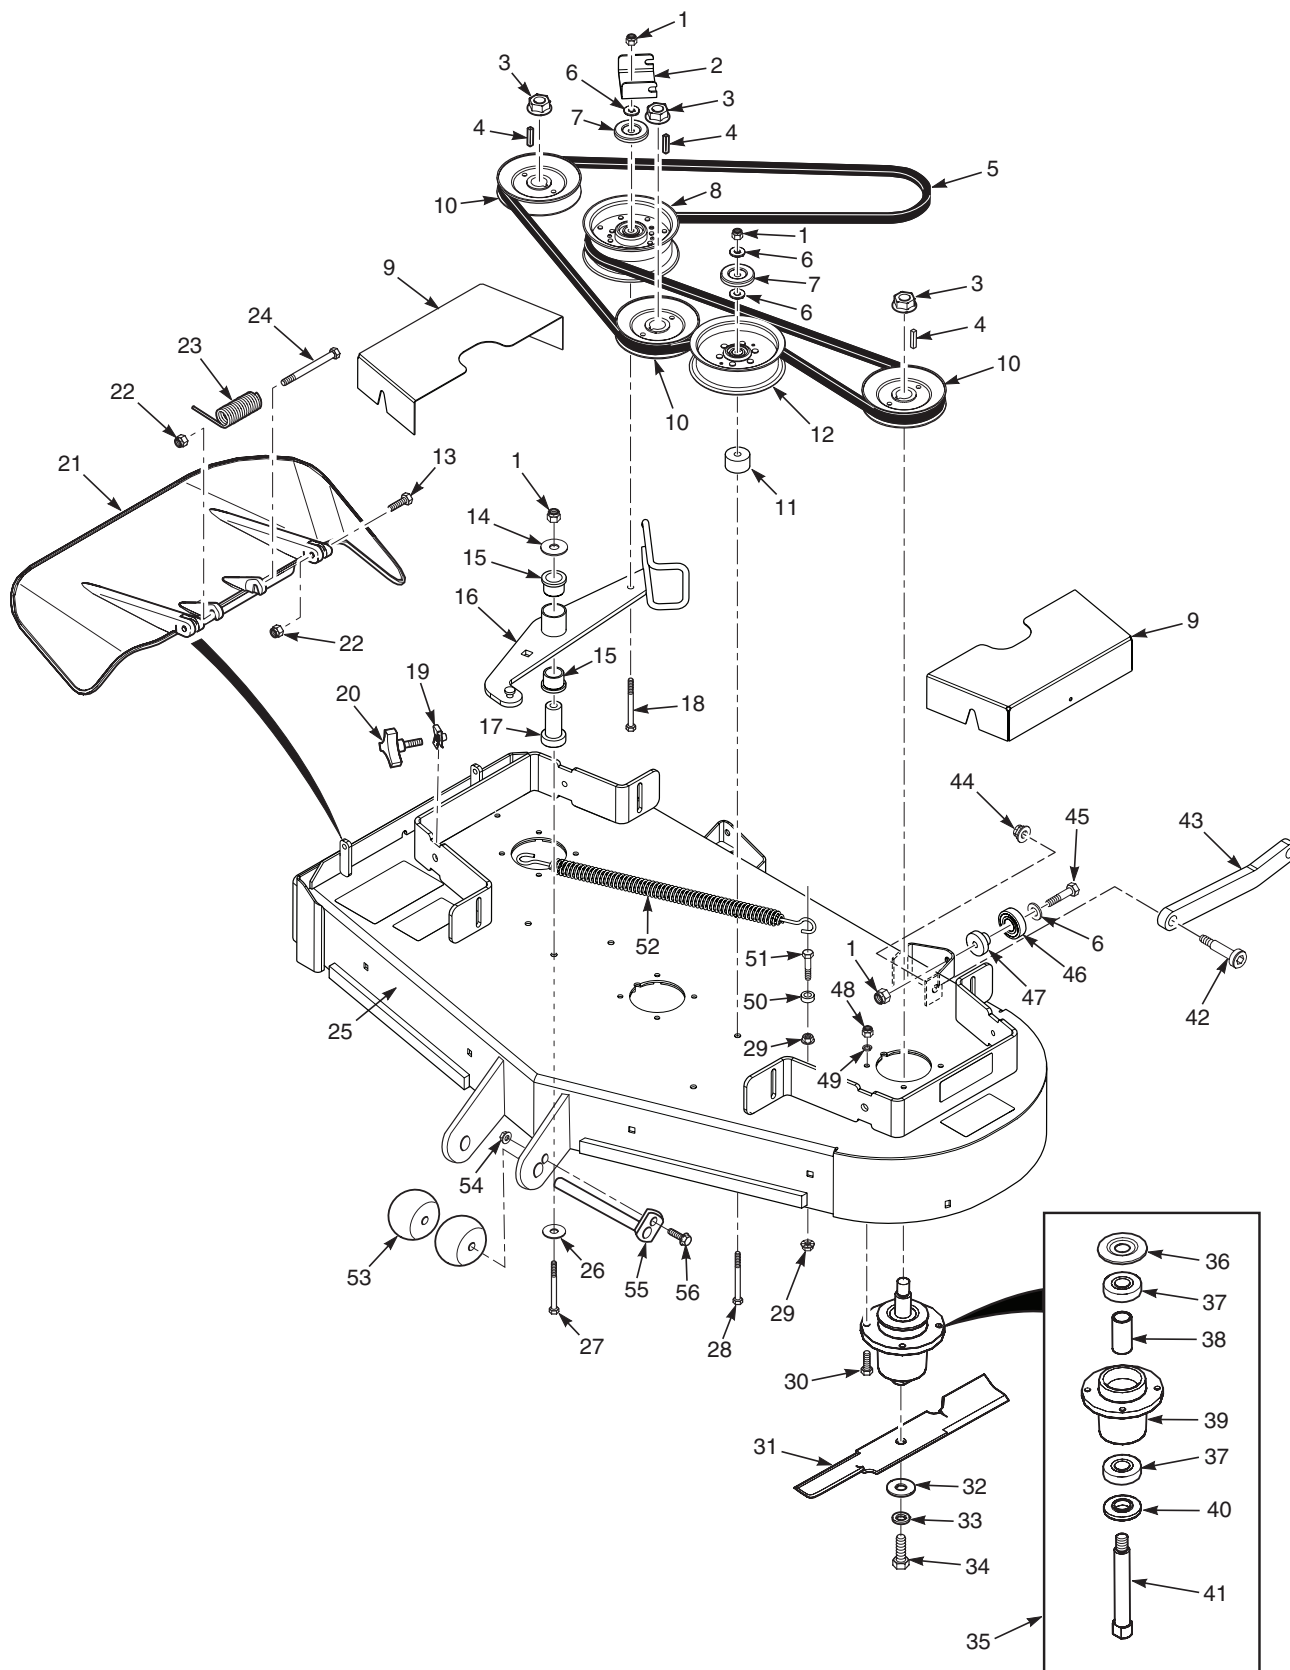


48" CUTTER DECK

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	424615	Bracket, Belt Guide
3	04112-06	Nut, 3/4-16 Spiral Lock
4	04063-01	Key, 1/4 x 1/4 x 1-1/4"
5	484618	Belt, Cutter Deck
6	04043-04	Flatwasher, 3/8-.391 x .938 x .105
7	424367	Dust Shield
8	483851	Pulley, 5" Idler
9	425978	Belt Cover
10	483323	Pulley, 5.13" OD - 25mm Bore
11	43711	Spacer
12	483422	Pulley, 5" Idler
13	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
14	04041-11	Flatwasher, 3/8-.406 x 1-1/2"
15	483453-03	Bearing
16	462191	Idler Arm (incl. item #15)
17	43708	Pivot, Idler
18	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
19	04110-04	U-Nut, 3/8-16
20	481625-01	Knob w/Stud
21	462031	Discharge Chute Assembly
*	462472	CA Discharge Chute
*	425619	Turbo Baffle
22	04021-10	Nut, Elastic Stop 5/16-18
23	482245	Spring, Discharge Chute
24	04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"
25	462978	Cutter Deck w/Decals, SMWZT-48
26	04041-38	Flatwasher, 3/8-.406 x 2.25" x .188
27	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"

Ref. No.	Part No.	Description
28	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
29	04019-04	Nut, Serrated Flange 3/8-16
30	04001-175	Bolt, Hex Head 5/16-18 x 1-1/2" Gr.8
31	482877	Cutter Blade, 16-1/2"
32	04043-06	Flatwasher, 5/8-.688 x 1.75 x .134 HD
33	04030-07	Lockwasher, 1/2 Spring
34	04001-121	Bolt, Hex Head 5/8-11 x 1-1/2"
35	461950	Spindle Assembly
36	483304	Debris Shield
37	483303	Bearing
38	43693	Spacer
39	462014	Spindle Housing Assembly (Incl. item #37, 38)
40	43694	Protector, Bearing
41	43695	Shaft, Spindle
42	04009-10	Bolt, Shoulder 1/2 x 3/8-16 x 2-3/4"
43	425959	Pusharm
44	04117-02	Nut, Elastic Flange 3/8-16
45	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
46	483379	Bearing
47	431046	Spacer, Bearing
48	04021-22	Nut, Elastic Stop 5/16-18 Gr.8
49	04030-03	Lockwasher, 5/16 Spring
50	43063	Spacer
51	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2 Gr.8
52	483375	Spring, Idler
53	482295	Wheel, Anti-Scalp
54	04019-03	Nut, Serrated Flange 5/16-18
55	461926	Shaft Weldment
56	04001-09	Bolt, Hex Head 5/16-18 x 1"

* = California Models Only (not shown)

52" CUTTER DECK

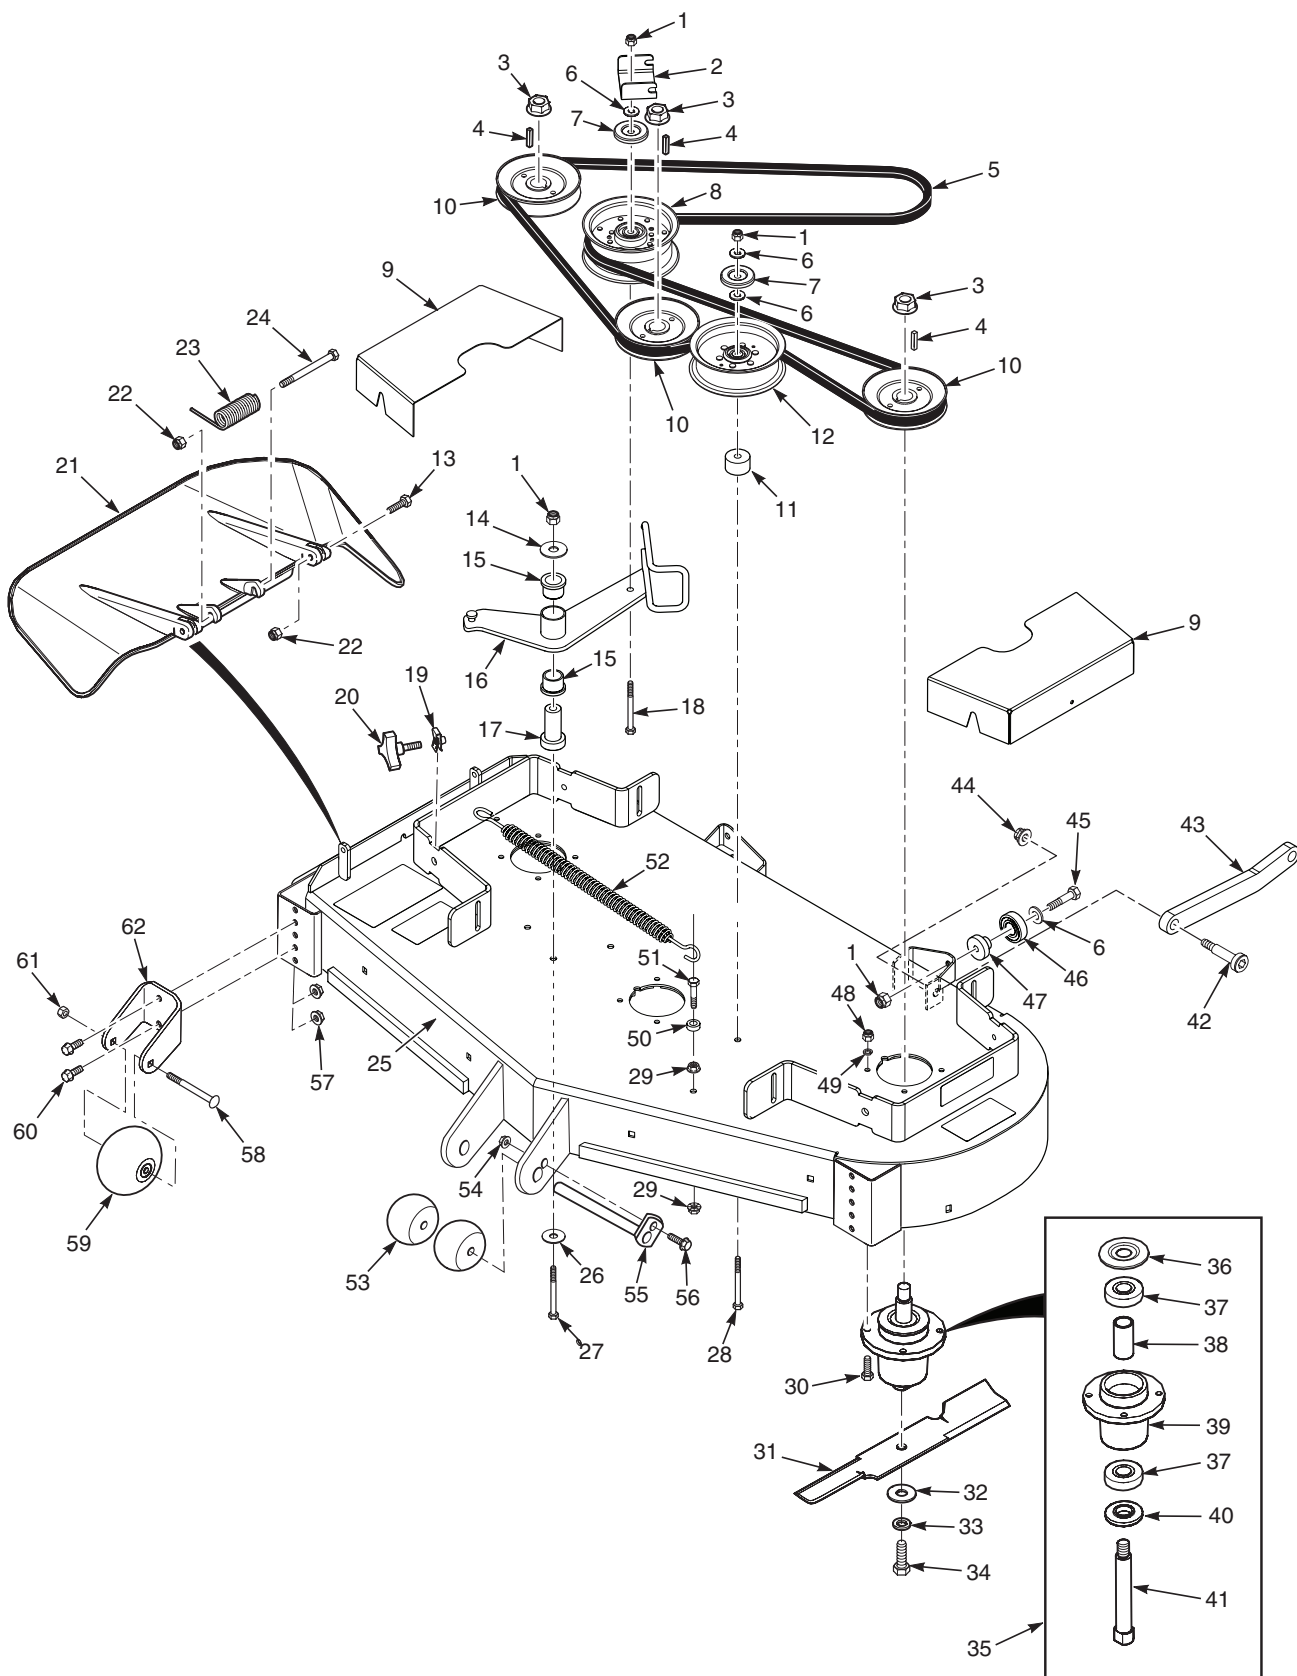


52" CUTTER DECK

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	424615	Bracket, Belt Guide
3	04112-06	Nut, 3/4-16 Spiral Lock
4	04063-01	Key, 1/4 x 1/4 x 1-1/4"
5	484695	Belt, Cutter Deck
6	04043-04	Flatwasher, 3/8-.391 x .938 x .105
7	424367	Dust Shield
8	483210	Pulley, 5" Idler
9	425979	Belt Cover
10	483324	Pulley, 5.73" OD - 25mm Bore
11	43711	Spacer
12	483422	Pulley, 5" Idler
13	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
14	04041-11	Flatwasher, 3/8-.406 x 1-1/2"
15	483453-03	Bearing
16	462672	Idler Arm (incl. item #15)
17	43708	Pivot, Idler
18	04001-62	Bolt, Hex Head 3/8-16 x 3-1/4"
19	04110-04	U-Nut, 3/8-16
20	481625-01	Knob w/Stud
21	462032	Discharge Chute Assembly
*	462474	CA Discharge Chute
*	424211	Turbo Baffle
22	04021-10	Nut, Elastic Stop 5/16-18
23	482245	Spring, Discharge Chute
24	04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"
25	462979	Cutter Deck w/Decals, SMWZT-52
26	04041-38	Flatwasher, 3/8-.406 x 2.25" x .188
27	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"
28	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
29	04019-04	Nut, Serrated Flange 3/8-16
30	04001-175	Bolt, Hex Head 5/16-18 x 1-1/2" Gr.8

Ref. No.	Part No.	Description
31	482878	Cutter Blade, 18"
32	04043-06	Flatwasher, 5/8-.688 x 1.75 x .134 HD
33	04030-07	Lockwasher, 1/2 Spring
34	04001-121	Bolt, Hex Head 5/8-11 x 1-1/2"
35	461950	Spindle Assembly
36	483304	Debris Shield
37	483303	Bearing
38	43693	Spacer
39	462014	Spindle Housing Assembly (Incl. item #37, 38)
40	43694	Protector, Bearing
41	43695	Shaft, Spindle
42	04009-10	Bolt, Shoulder 1/2 x 3/8-16 x 2-3/4"
43	425959	Pusharm
44	04117-02	Nut, Elastic Flange 3/8-16
45	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
46	483379	Bearing
47	431046	Spacer, Bearing
48	04021-22	Nut, Elastic Stop 5/16-18 Gr.8
49	04030-03	Lockwasher, 5/16 Spring
50	43063	Spacer
51	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2 Gr.8
52	483246	Spring, Idler
53	482295	Wheel, Anti-Scalp
54	04019-03	Nut, Serrated Flange 5/16-18
55	461926	Shaft Weldment
56	04001-09	Bolt, Hex Head 5/16-18 x 1"
57	04019-04	Nut, Serrated Flange 3/8-16
58	04003-26	Bolt, Carriage 3/8-16 x 4"
59	481632	Wheel, Anti-Scalp
60	04017-27	Bolt, Hex Head 3/8-16 x 1" Ser. Flg.
61	04021-05	Nut, Center Lock 3/8-16
62	422478	Bracket, Anti-Scalp

* = California Models Only (not shown)

61" CUTTER DECK

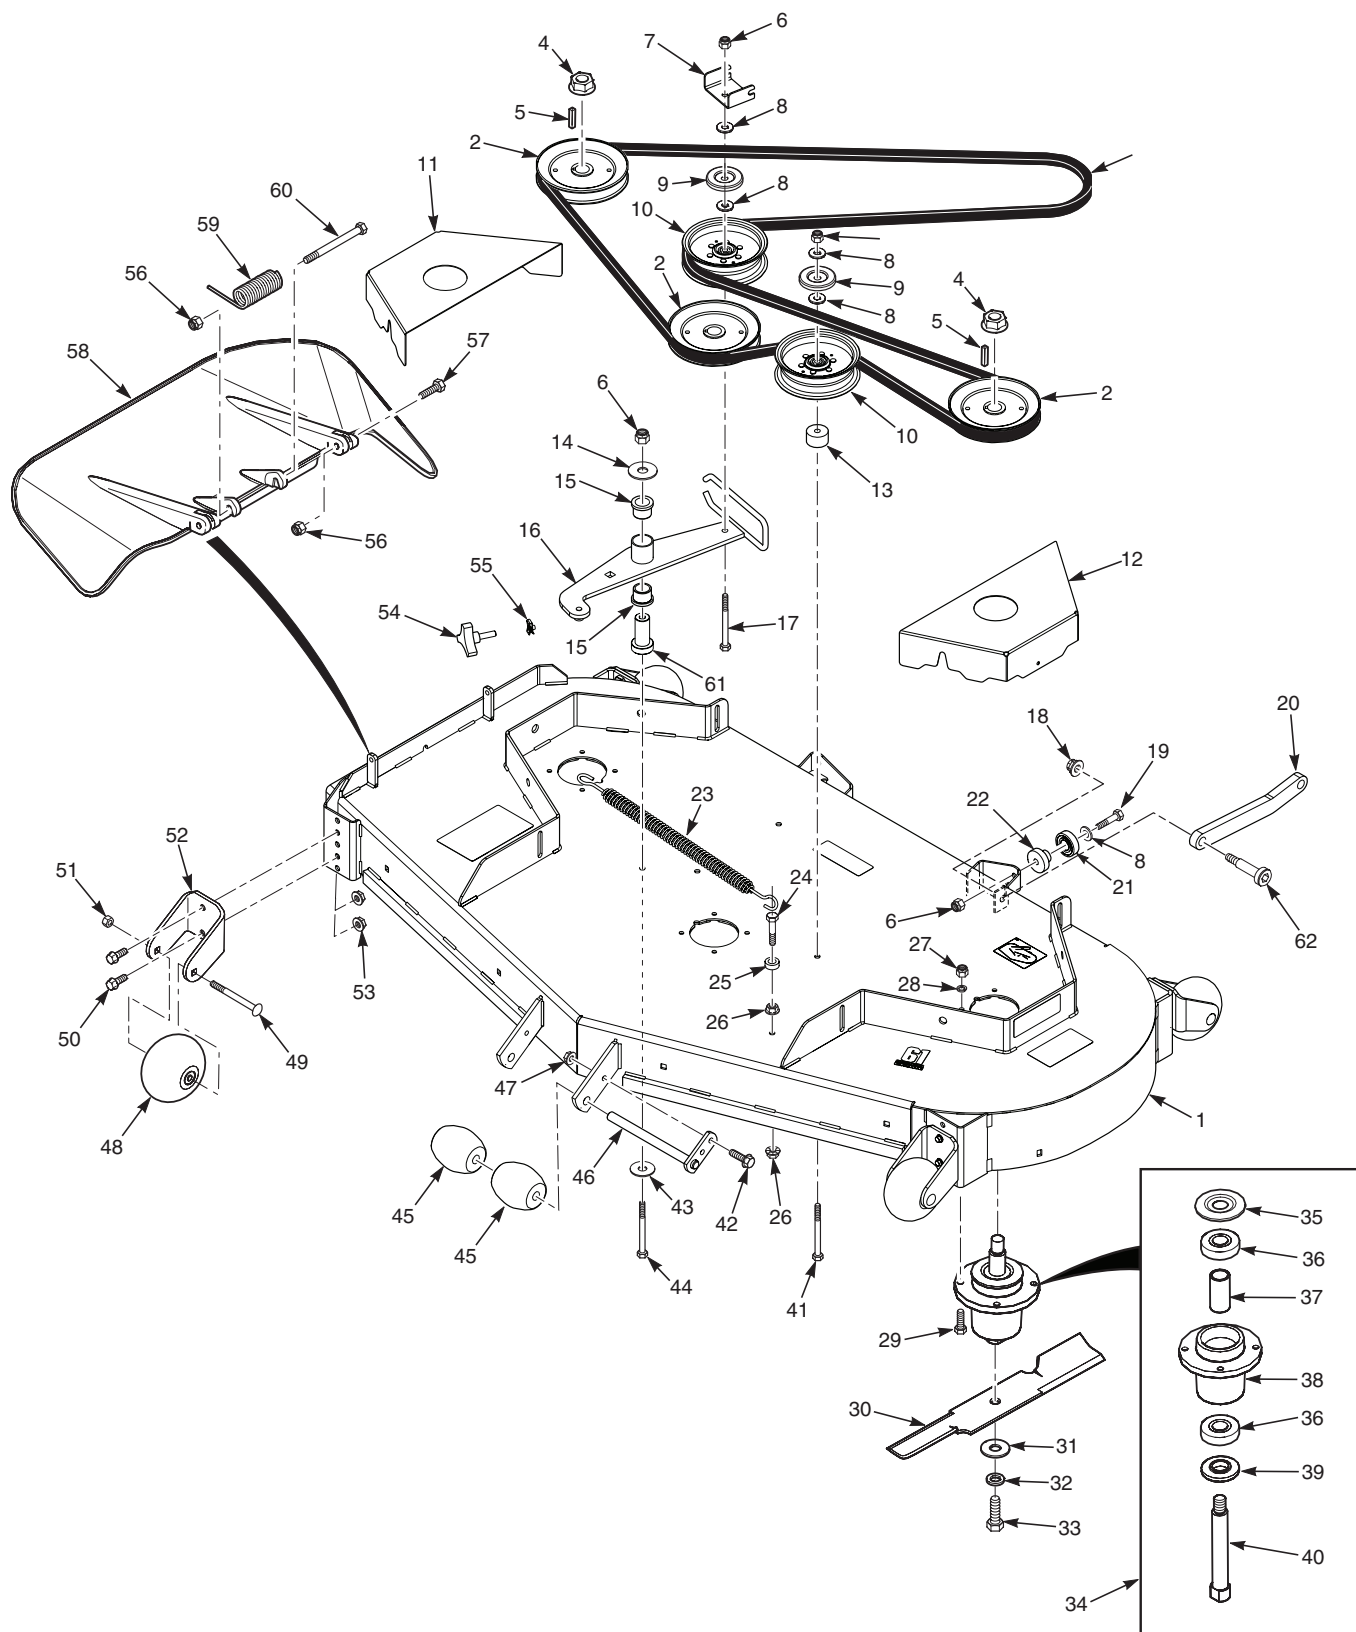

61" CUTTER DECK

Ref. No.	Part No.	Description
1	462980	Cutter Deck w/Decals, SWZT61
2	484026	Pulley, 6.32" Dia.
3	485511	Belt, Cutter Deck - SWZT61
4	04112-06	Nut, Spiral Lock 3/4-16
5	04063-01	Key, 1/4 x 1/4 x 1-1/4"
6	04021-09	Nut, Elastic Stop 3/8-16
7	424615	Bracket, Belt Guide
8	04043-04	Flatwasher, 3/8-.391 x .938 x .105
9	424367	Dust Shield
10	483422	Pulley, Idler 5"
11	426905	Belt Cover, RH - SWZT61
12	426904	Belt Cover, LH - SWZT61
13	43711	Spacer
14	04041-11	Flatwasher, 3/8-.406 x 1-1/2"
15	483453-03	Bearing
16	462829	Idler Arm Weldment w/Bearings - SWZT61
17	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
18	04117-02	Nut, Elastic Flange 3/8-16
19	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
20	425959	Pusharm
21	483379	Bearing
22	431046	Spacer, Bearing
23	483375	Spring, Deck Idler
24	04001-136	Bolt, Hex Head 3/8-16 x 1-1/2" Gr. 8
25	43063	Spacer
26	04019-04	Nut, Serrated Flange 3/8-16
27	04021-22	Nut, Elastic Stop 5/16-18 Gr.8
28	04030-03	Lockwasher, 5/16" Spring
29	04001-175	Bolt, Hex Head 5/16-18 x 1-1/2" Gr.8
30	482879	Cutter Blade, 21"
31	04043-06	Flatwasher, 5/8-.688 x 1.75 x .134 HD
32	04030-07	Lockwasher, 5/8" Spring
33	04001-121	Bolt, Hex Head 5/8-11 x 1-1/2"

Ref. No.	Part No.	Description
34	461950	Spindle Assembly
35	483304	Debris Shield
36	483303	Bearing
37	43693	Spacer
38	462014	Spindle Housing
39	43694	Protector, Bearing
40	43695	Shaft, Spindle
41	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
42	04001-09	Bolt, Hex Head 5/16-18 x 1"
43	04041-38	Flatwasher, 3/8-.406 x 2.25 x .1875
44	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"
45	482295	Wheel, Anti-Scalp
46	451926	Shaft Weldment
47	04117-01	Nut, Serrated Flange 5/16-18
48	481632	Wheel, Anti-Scalp
49	04003-26	Bolt, Carriage 3/8-16 x 4"
50	04017-27	Bolt, Hex Head Serrated Flange 3/8-16 x 1"
51	04021-05	Nut, Center Lock 3/8-16
52	422478	Bracket, Anti-Scalp
53	04019-04	Nut, Serrated Flange 3/8-16
54	481625-01	Knob w/Stud
55	04110-04	U-Nut, 3/8-16
56	04021-10	Nut, Elastic Stop 5/16-18
57	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
58	462213	Discharge Chute Assembly
*	462476	CA Discharge Chute
*	425867	Turbo Baffle
59	482245	Spring, Discharge Chute
60	04001-154	Bolt, Hex Head 5/16-18 x 4-3/4"
61	43708	Pivot, Idler
62	04009-10	Bolt, Shoulder 1/2 x 3/8-16 x 2-3/4"


* = California Models Only (not shown)

CUTTER DECK CONTROLS

Ref. No.	Part No.	Description
1	481625-01	Knob W/Stud, 3/8-16 x 1-1/4"
2	04029-04	Wing Nut, 3/8" Plastic Small
3	462683	Belt Cover w/Decals
	462788	Belt Cover w/Decals - SWZT61
4	462522	Deck Bellcrank Assy. (Incl. item #8)
	462792	Deck Bellcrank Assy. (Incl. item #8) - SWZT61
5	04021-09	Nut, Elastic Stop 3/8-16
6	04041-07	Flatwasher, 3/8-.391 x .938 x .105
7	43086	Bushing
8	484669	Grip, Deck Lift
9	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
10	04019-04	Nut, Serrated Flange 3/8-16
11	483334	Bearing, Deck Lift
12	425209	Reinforcement, Bearing
13	04017-17	Cpscrw, 5/16-18 x 1"Serrated Flange Hex Head
14	04021-04	Nut, Center Lock 5/16-18
15	452018	Deck Lift Weldment, Front
	452692	Deck Lift Weldment, Front - SWZT61
16	425968	Link, Decklift
	426896	Link, Decklift -SWZT61
17	462677	Frame w/Decals (SWZT 36 & 48)
	462678	Frame w/Decals (SWZT 52)
	462819	Frame w/Decals (SWZT 61)
18	04062-04	Hair Pin Cotter
19	483345	Pin Assembly w/Lanyard
20	04001-31	Bolt, Hex Head 3/8-16 x 2-1/2"
21	04041-07	Flatwasher, 3/8-.391 x .938 x .105
22	48540	Chain
23	48114-04	Grease Fitting
24	04003-23	Bolt, Carriage 3/8-16 x 1"
25	9275	Flat-Free Tire Assy. (Incl. #26, #27, #28)
	9276	Flat-Free Tire Assy. (Incl. #26, #27, #28) - SWZT61
26	481770	Retainer, Caster Wheel Bearing
27	481769	Roller Bearing, Caster Wheel
28	48114-03	Grease Fitting, 45 Degree 1/4-28
29	04021-07	Nut, Elastic Stop 1/2-13
30	45006	Caster Yoke
	452697	Caster Yoke - SWZT61
31	43022	Sleeve, Caster Wheel Bearing
	43511	Sleeve, Caster Wheel Bearing - SWZT61
32	04001-37	Bolt, Hex Head 1/2-13 x 5-1/2"
33	04066-01	Quick Pin
34	48100-01	Bronze Bearing
35	04024-02	Nut, Push-On 3/8"
36	04110-03	U-Nut 3/8-16
37	425970	Bracket, Deck Height
38	43805	Spacer
39	04001-19	Bolt, Hex Head 3/8-16 x 1"
40	462817	Lever Assembly, Deck Latch (incl. #41)
41	485718	Grip, Deck Transport Lock
42	43736	Spacer, Caster Bearing
*43	04001-19	Bolt, Hex Head 3/8-16 x 1"
*44	04041-38	Flatwasher, 3/8-.406 x 2.25 x .188
*45	04040-11	Flatwasher, 7/16-.500 x 1.250 x .083
*46	424636	Spacer, Yoke
*47	04030-04	Lockwasher, 3/8" Spring

* = SWZT61 Models Only

ENGINE DECK & HYDRAULIC SYSTEM

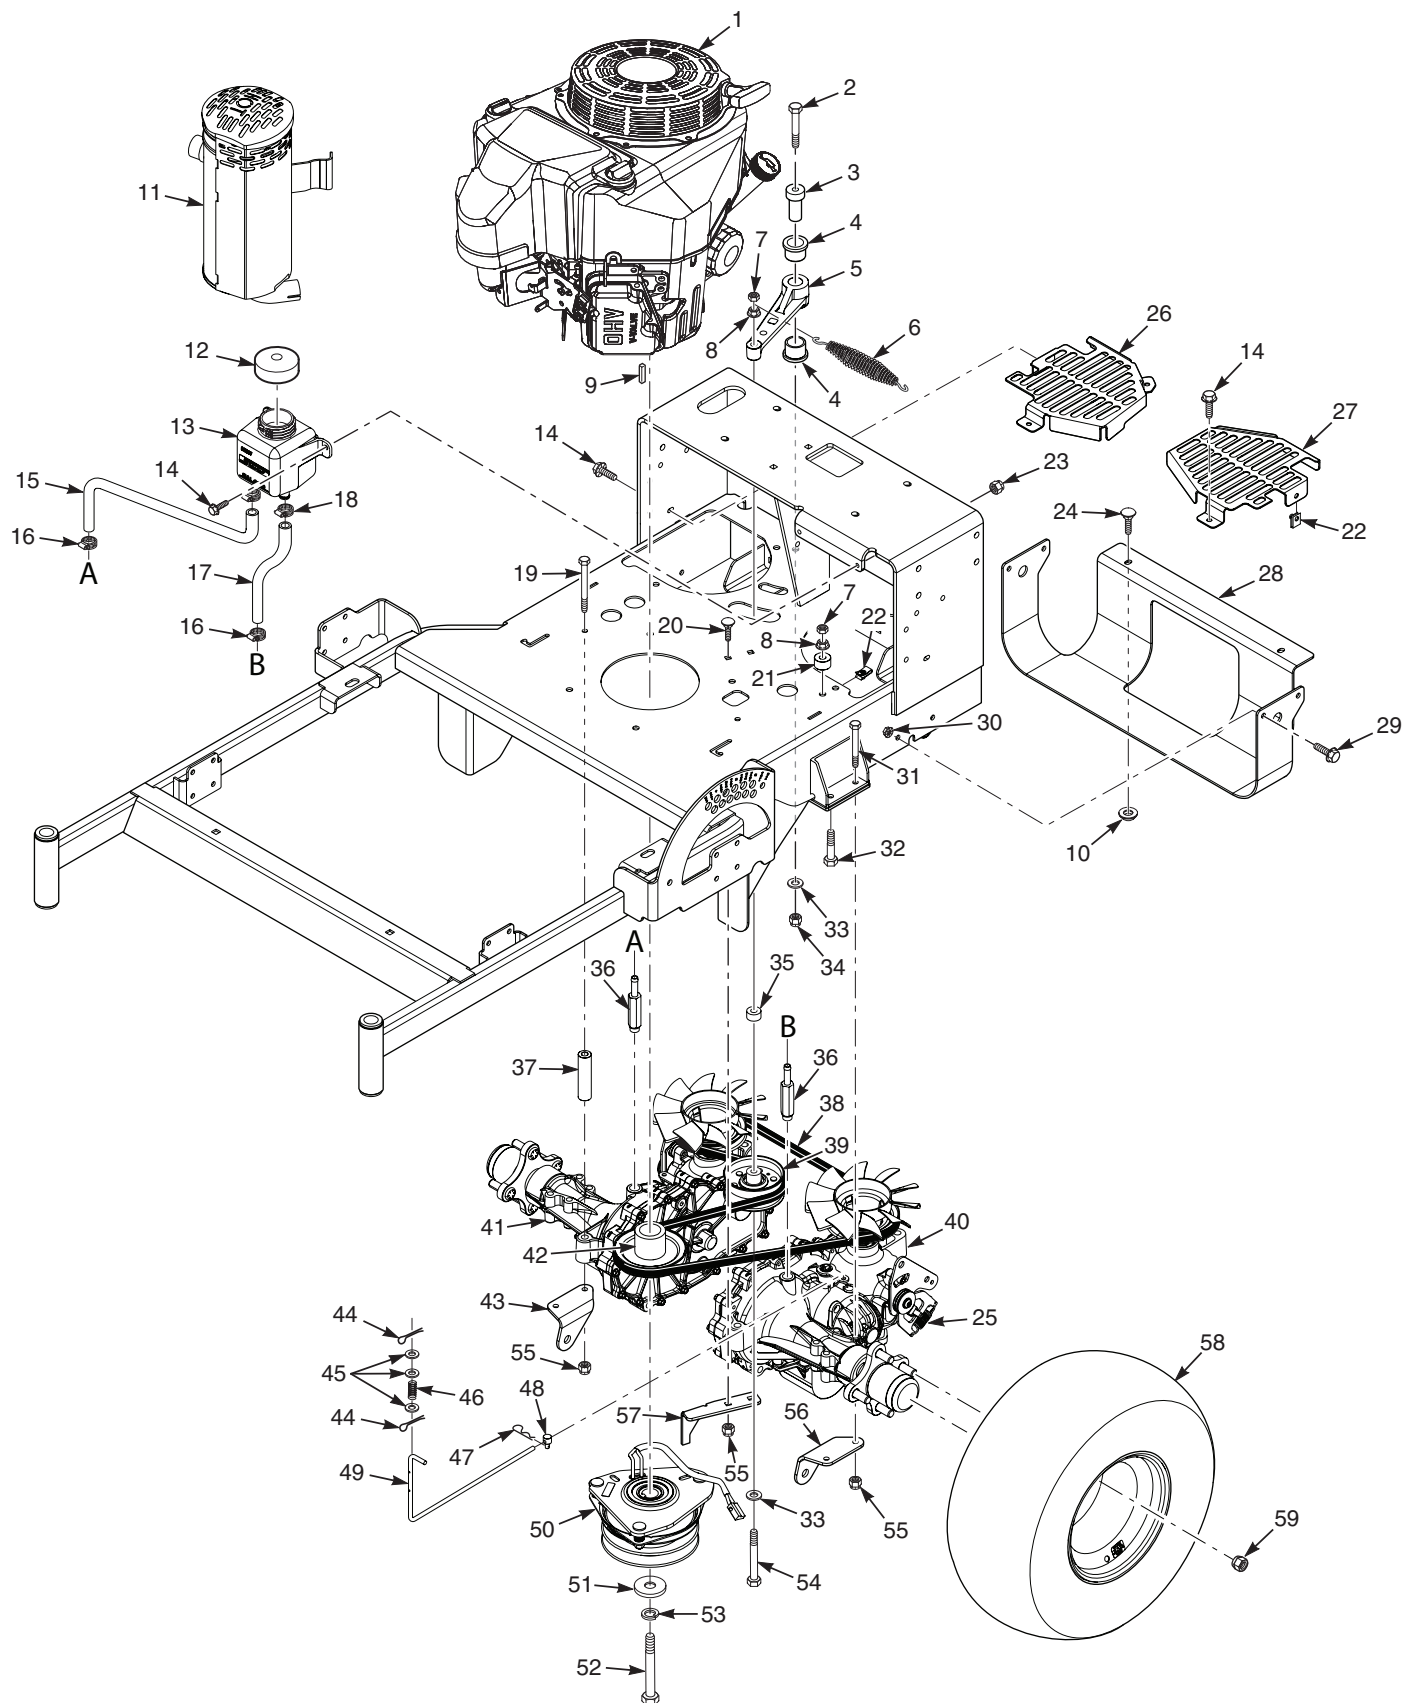

ENGINE DECK & HYDRAULIC SYSTEM


Ref. No.	Part No.	Description
1	*485014	Engine, Kawasaki FS481V
	*485015	Engine, Kawasaki FS541V
	*485016	Engine, Kawasaki FS600V (Recoil Start)
	*485023	Engine, Kawasaki FS600V (Electric Start)
	*485017	Engine, Kawasaki FS651V (Electric Start)
2	04001-54	Bolt, Hex Head 3/8-16 x 3"
3	431049	Pivot, Idler
4	483453-04	Bearing
5	463017	Idler Arm (incl. item #4)
6	483087	Spring, Transmission Idler
7	04021-05	Nut, Center Lock 3/8-16
8	04019-04	Nut, Serrated Flange 3/8-16
9	04063-03	Key, 1/4 x 1/4 x 2-1/2"
10	04024-03	Nut, Push-On 5/16-18
11	484620	Muffler, Kawasaki (FS481, FS541, FS600)
	485571	Muffler, Kawasaki (FS651) - SWZT61
	485572	Manifold, Kawasaki (FS651) - SWZT61
12	483514	Cap
13	483438	Reservoir Assembly (incl item #12)
14	04017-05	Bolt, Hex Head, Serrated Flng 1/4-20 x 3/4"
15	484664	Hose, RH Transmission
16	48136-13	Clamp, 0.69" Max Dia.
17	484663	Hose, LH Transmission
18	48136-05	Clamp, 0.87" Max Dia.
19	04001-196	Bolt, Hex Head 5/16-18 x 6-1/2"
20	04003-04	Bolt, Carriage 5/16-18 x 1"
21	43282	Spacer
22	04110-01	U-Nut, 1/4-20
23	04021-08	Nut, Elastic Stop 1/4-20
24	04003-12	Bolt, Carriage 5/16-18 x 3/4
25	**484600	Spring, RTN
26	462962	Fan Cover, RH (incl item #22)
27	462961	Fan Cover, LH (incl item #22)
28	425778	Skid Plate
29	04017-16	Cpscrw, 5/16-18 x 3/4"Serrated Flange HH
30	04019-03	Nut, Serrated Flange 5/16-18
31	04001-49	Bolt, Hex Head 5/16-18 x 3"

Ref. No.	Part No.	Description
32	04001-170	Bolt, Hex Head 3/8-16 x 2-1/2"
33	04043-04	Flatwasher, 3/8-.391 x .938 x .105 Hardened
34	04021-09	Nut, Elastic Stop 3/8-16
35	43720	Spacer
36	482800-04	Fitting, Transmission
37	43880	Spacer, Axle
38	484578	Belt, Transmission Drive
39	483638	Pulley, 3-1/2" Dia.
40	484576	**Transaxle Assy., (ZH-GMCC-3LUB-1MXX)
41	484577	**Transaxle Assy., (ZH-KMCC-3LUC-1MXX)
42	484595	Pulley, 4-1/2" Dia. 1" Bore
43	425954	Pusharm Mount Bracket, RH
44	04061-01	Cotter Pin, 3/32 x 1"
45	04040-14	Flatwasher, 1/4-.312 x .750 x .065
46	482070	Spring, Dump Valve Link
47	04069-01	Pin, Rue Cotter 3/8" Dia.
48	43876	Joint, Swivel
49	44188	Link, Dump Valve
50	462610	Electric Clutch Assembly
51	04041-28	Flatwasher, 7/16-.469 x 1.75 x .25
52	04102-06	Bolt, Hex Head 7/16-20 x 3" w/t Patch
53	04030-05	Lockwasher, 7/16" spring
54	04001-51	Bolt, Hex Head 3/8-16 x 3-3/4"
55	04021-10	Nut, Elastic Stop 5/16-18
56	425953	Pusharm Mount Bracket, LH
57	425696	Bracket, Anti-Rotation
58	484682	Wheel Assembly 18 x 6.5-8 (36" Only)
	484683	Rim, Painted (36" Only)
	481871	Tire 18 x 6.5-8 (36" Only)
	481867	Wheel Assembly 18 x 8.5-8
	481868	Rim, Painted
	481869	Tire 18 x 8.5-8
59	04028-02	Wheel Nut, 1/2-20

* Available through the individual engine manufacturer.

** RTN Spring is Scag p/n 484600. See item #25

STEERING CONTROLS

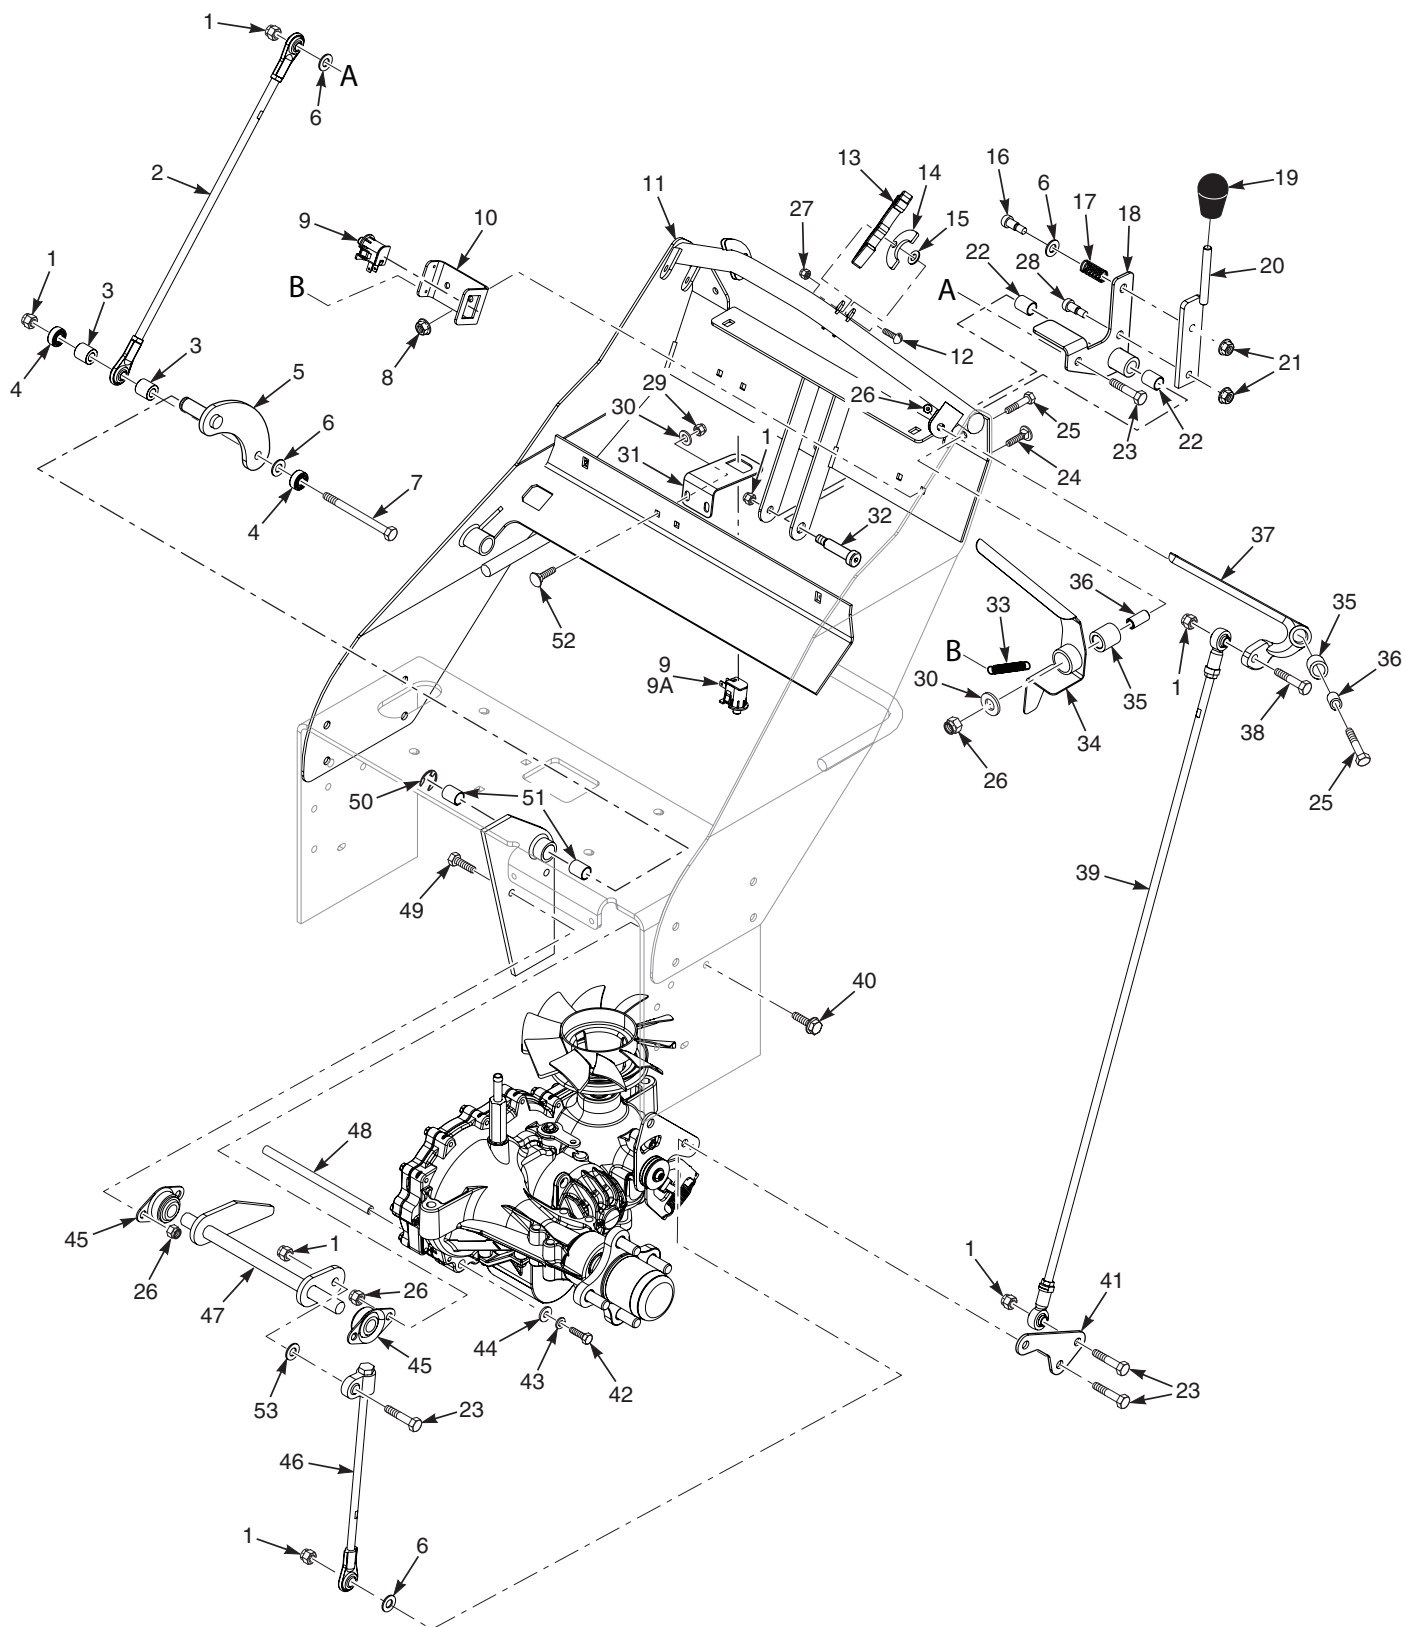


STEERING CONTROLS

Ref. No.	Part No.	Description
1	04021-09	Nut, Elastic Stop 3/8-16
2	484589	Linkage, Speed Control
3	43674	Spacer
4	484035	Bearing
5	452363	Neutral Plate Weldment
6	04040-05	Flatwasher, 3/8-.406 x .812 x .065
7	04001-77	Bolt, Hex Head 3/8-16 x 3-1/2"
8	04019-02	Nut, Serrated Flange 1/4-20
9	48717	Switch (Manual Start)
9A	483473	Switch (Electric Start Only)
10	425937	Bracket, Operator Presence Switch
11	462835	Handle Assy, W/Decals
12	04010-34	Machine Screw, #10-32 x 1-1/2", Pan Head
13	462688	Latch, Thumb
14	484749	Plate, Anti-Friction
15	04032-05	Washer, 1/4" Curved Spring
16	04009-11	Bolt, Shoulder 3/8 x 1"
17	483601	Spring, Speed Control
18	462575	Neutral Handle Assy (incl item #22)
19	484672	Knob, Soft Touch
20	452118	Handle Weldment, Speed Control
21	04019-03	Nut, Serrated Flange 5/16-18
22	483453-19	Bearing, Plastic 1/2" I.D.
23	04001-20	Bolt, Hex Head 3/8-16 x 1-1/2"
24	04003-09	Bolt, Carriage 1/4-20 x 1-1/4"
25	04001-12	Bolt, Hex Head 5/16-18 x 1-3/4"
26	04021-10	Nut, Elastic Stop 5/16-18
27	04021-01	Nut, Elastic Stop #10-32
28	04009-14	Bolt, Shoulder 3/8 x .375"

Ref. No.	Part No.	Description
29	04021-08	Nut, Elastic Stop 1/4-20
30	04040-15	Flatwasher, 5/16-.375 x .875 x .083
31	425948	Bracket, Neutral Switch (Manual Start)
	426568	Bracket, Neutral Switch (Electric Start Only)
32	04009-16	Bolt, Shoulder 1/2 x 2"
33	484670	Spring, Operator Presence
34	462494	Handle, Op. Presence-LH (incl item #35)
	462495	Handle, Op. Presence-RH (incl item #35)
35	483453-22	Bearing
36	43866	Sleeve, Pivot
37	462489	Handle Assembly-LH (incl item #35)
	462490	Handle Assembly-RH (incl item #35)
38	04001-21	Bolt, Hex Head 3/8-16 x 1-3/4"
39	484579	Linkage, Steering
40	04017-16	Cpscrw, 5/16-18 x 3/4"Serrated Flange HH
41	425756	Bracket, Transaxle Control
42	04001-45	Bolt, Hex Head 3/8-16 x 2"
43	04030-04	Lockwasher, 3/8" Spring
44	04041-07	Flatwasher, 3/8-.391 x .938 x .105
45	48796	Bearing, Self Aligning 5/8" I.D.
46	483574	Linkage, Pump
47	452300	Weldment, Bellcrank-LH
	452301	Weldment, Bellcrank-RH
48	43766	Spacer, Axles
49	04001-09	Bolt, Hex Head 5/16-18 x 1"
50	04050-01	Retaining Ring .625" EXT. "E"
51	484671-01	Bearing
52	04003-02	Bolt, Carriage 1/4-20 x 3/4"
53	04043-04	Flatwasher, 3/8-.391 x .938 x .105 Hardened


BRAKE COMPONENTS

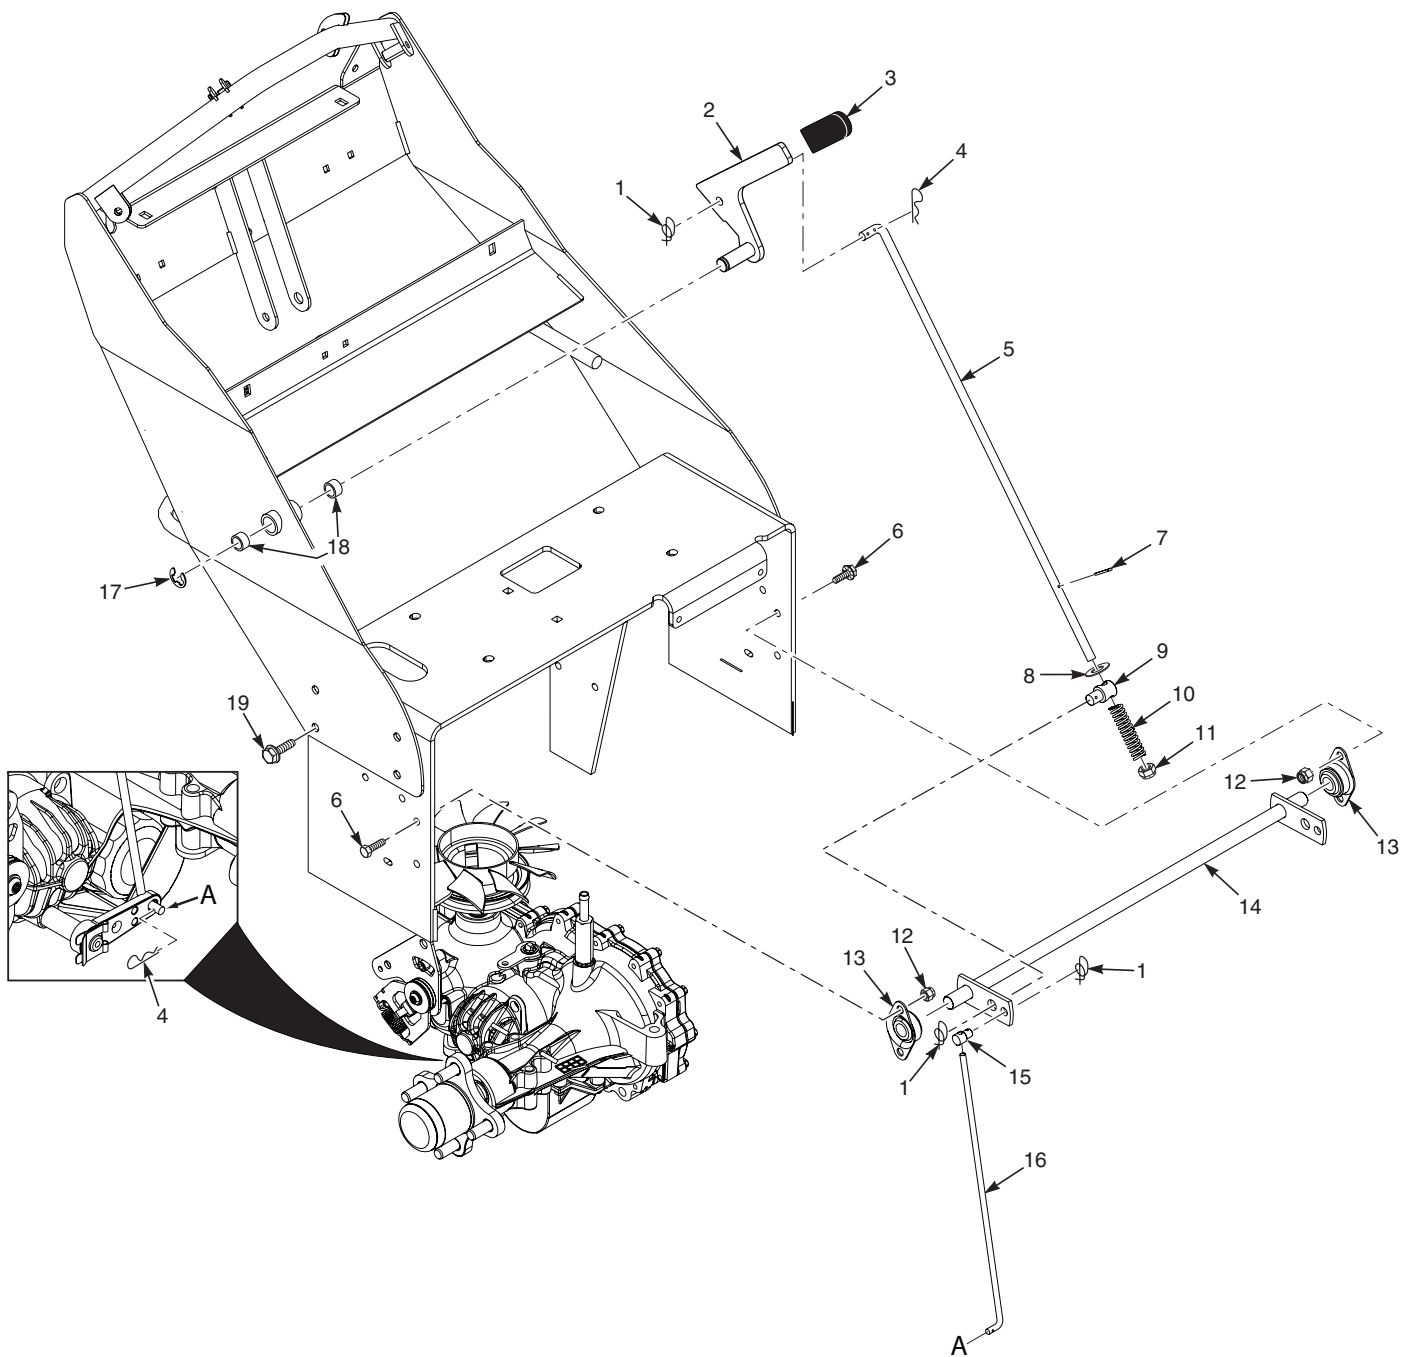

BRAKE COMPONENTS

Ref. No.	Part No.	Description
1	04069-01	Pin, Rue Cotter 3/8" Dia.
2	462515	Brake Lever w/Grip
3	481548	Grip, Brake Lever
4	04062-02	Hair Pin, .080 x 1.19"
5	44187	Rod, Brake Linkage
6	04017-16	Cpscrw, 5/16-18 x 3/4"Serrated Flange HH
7	04061-02	Cotter Pin, 3/32 x 3/4"
8	04040-05	Flatwasher, 3/8-.406 x .812 x .065
9	43751	Bushing, Pivot Slide
10	484175	Spring, Brake
11	04021-18	Nut, Elastic Stop 3/8-24
12	04021-10	Nut, Elastic Stop 5/16-18
13	48796	Bearing, Self Aligning 5/8" I.D.
14	452358	Weldment, Brake Bellcrank
15	43726	Joint, Swivel
16	44165	Rod, Brake Adjustment
17	04050-01	Ring, Retaining 5/8" External "E"
18	483453-18	Bearing
19	04017-27	Cpscrw, 3/8-16 x 1"Serrated Flange HH


ELECTRICAL SYSTEM AND THROTTLE CONTROL - MANUAL START

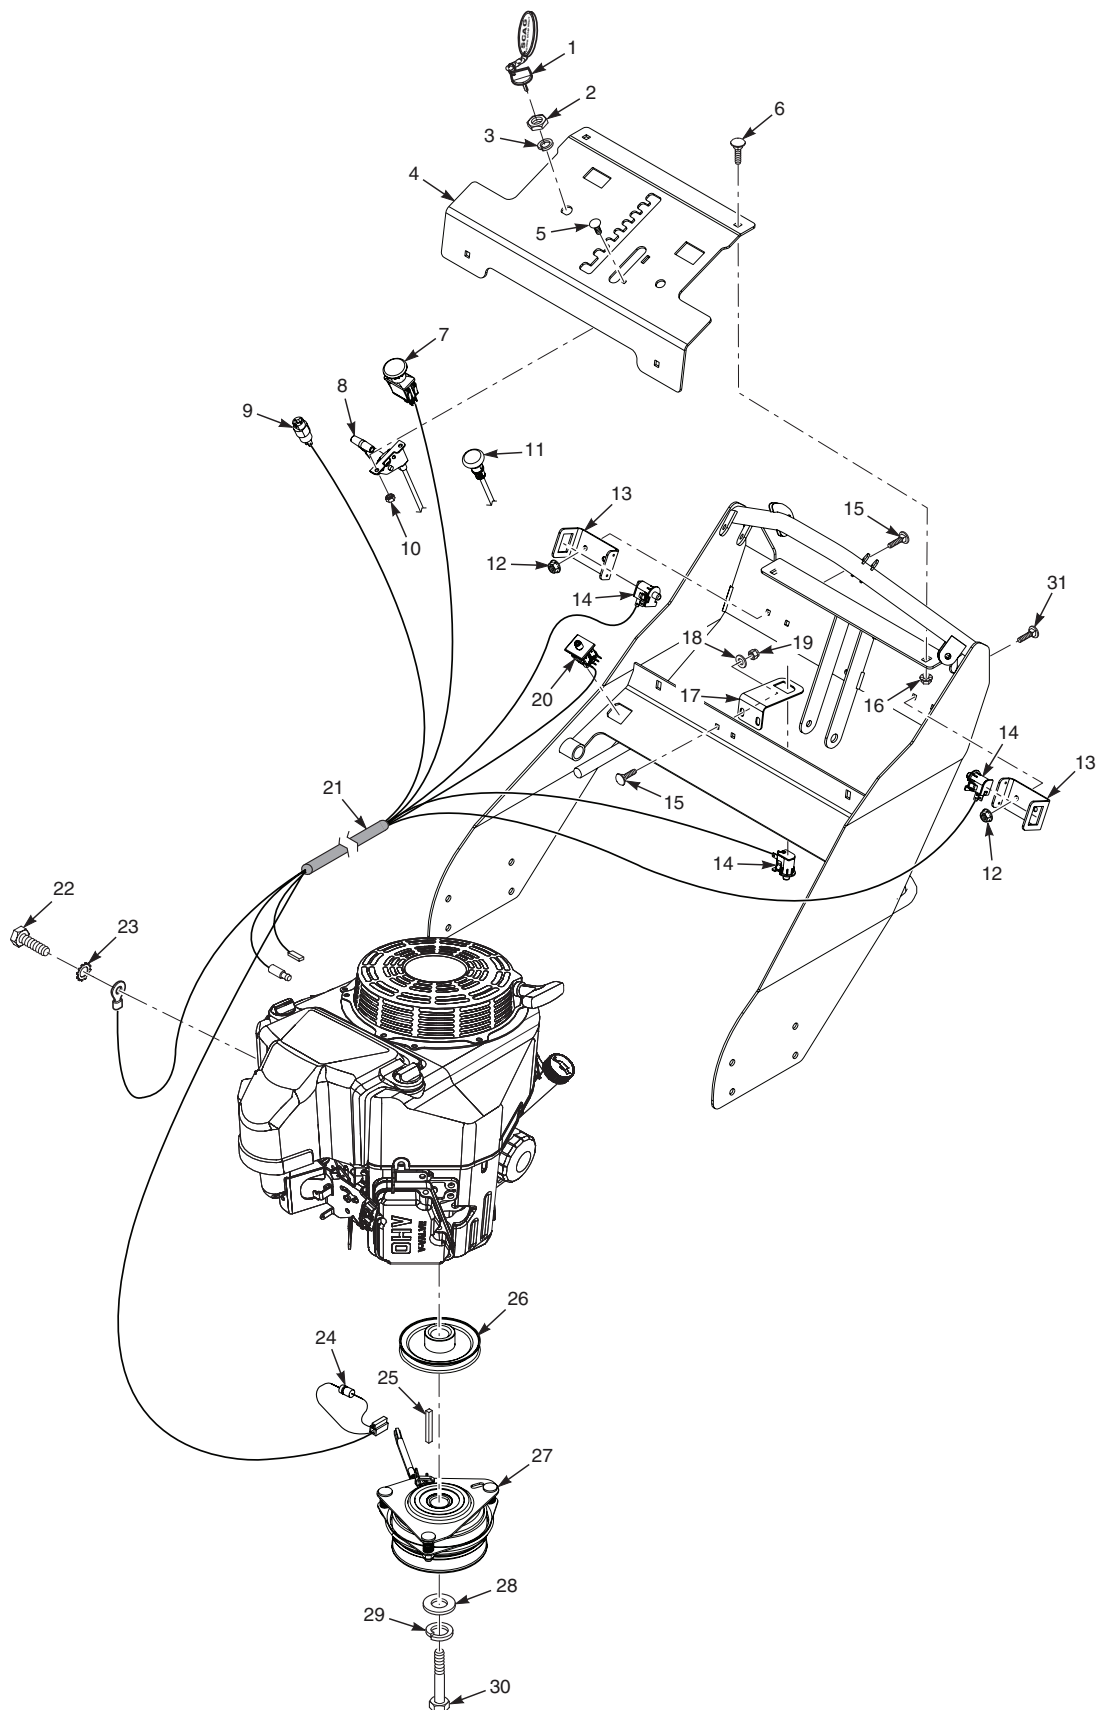

ELECTRICAL SYSTEM AND THROTTLE CONTROL - MANUAL START

Ref. No.	Part No.	Description
1	462069	Key Assembly w/Fob
	483609	Key w/Shroud
2	48017-04	Nut, 5/8-32 Special
3	48017-03	Lockwasher, 5/8" Internal Tooth
4	462576	Instrument Panel w/Decal
5	04003-43	Bolt, Carriage #10-24 x 1/2"
6	04003-12	Bolt, Carriage 5/16-18 x 3/4"
7	483957	PTO Switch
8	484665	Throttle Cable
9	48609	Key Switch
10	04021-26	Nut, Elastic Stop #10-24
11	483552	Choke Control
12	04019-02	Nut, Serrated Flange 1/4-20
13	425937	Bracket, Operator Presence Switch
14	48717	Switch
15	04003-02	Bolt, Carriage 1/4-20 x 3/4"
16	04019-03	Nut, Serrated Flange 5/16-18
17	425948	Bracket, Neutral Switch
18	04040-15	Flatwasher, 5/16-.375 x .875 x .083
19	04021-08	Nut, Elastic Stop 1/4-20
20	483473	Switch, Brake Interlock
21	484625	Wire Harness
22	04002-17	Bolt, Hex Head M8-1.25 x 14
23	04031-03	Lockwasher, 5/16" External Tooth
24	483958	Diode
25	04063-03	Key, 1/4 x 1/4 x 2-1/2"
26	484595	Pulley, 4-1/2" Dia. 1" Bore
27	462610	Electric Clutch Assembly
28	04041-28	Flatwasher, 7/16-.469 x 1.75 x .25
29	04030-05	Lockwasher, 7/16" spring
30	04102-06	Bolt, Hex Head 7/16-20 x 3" w/t Patch
31	04003-09	Bolt, Carriage 1/4-20 x 1-1/4"


ELECTRICAL SYSTEM AND THROTTLE CONTROL - ELECTRIC START

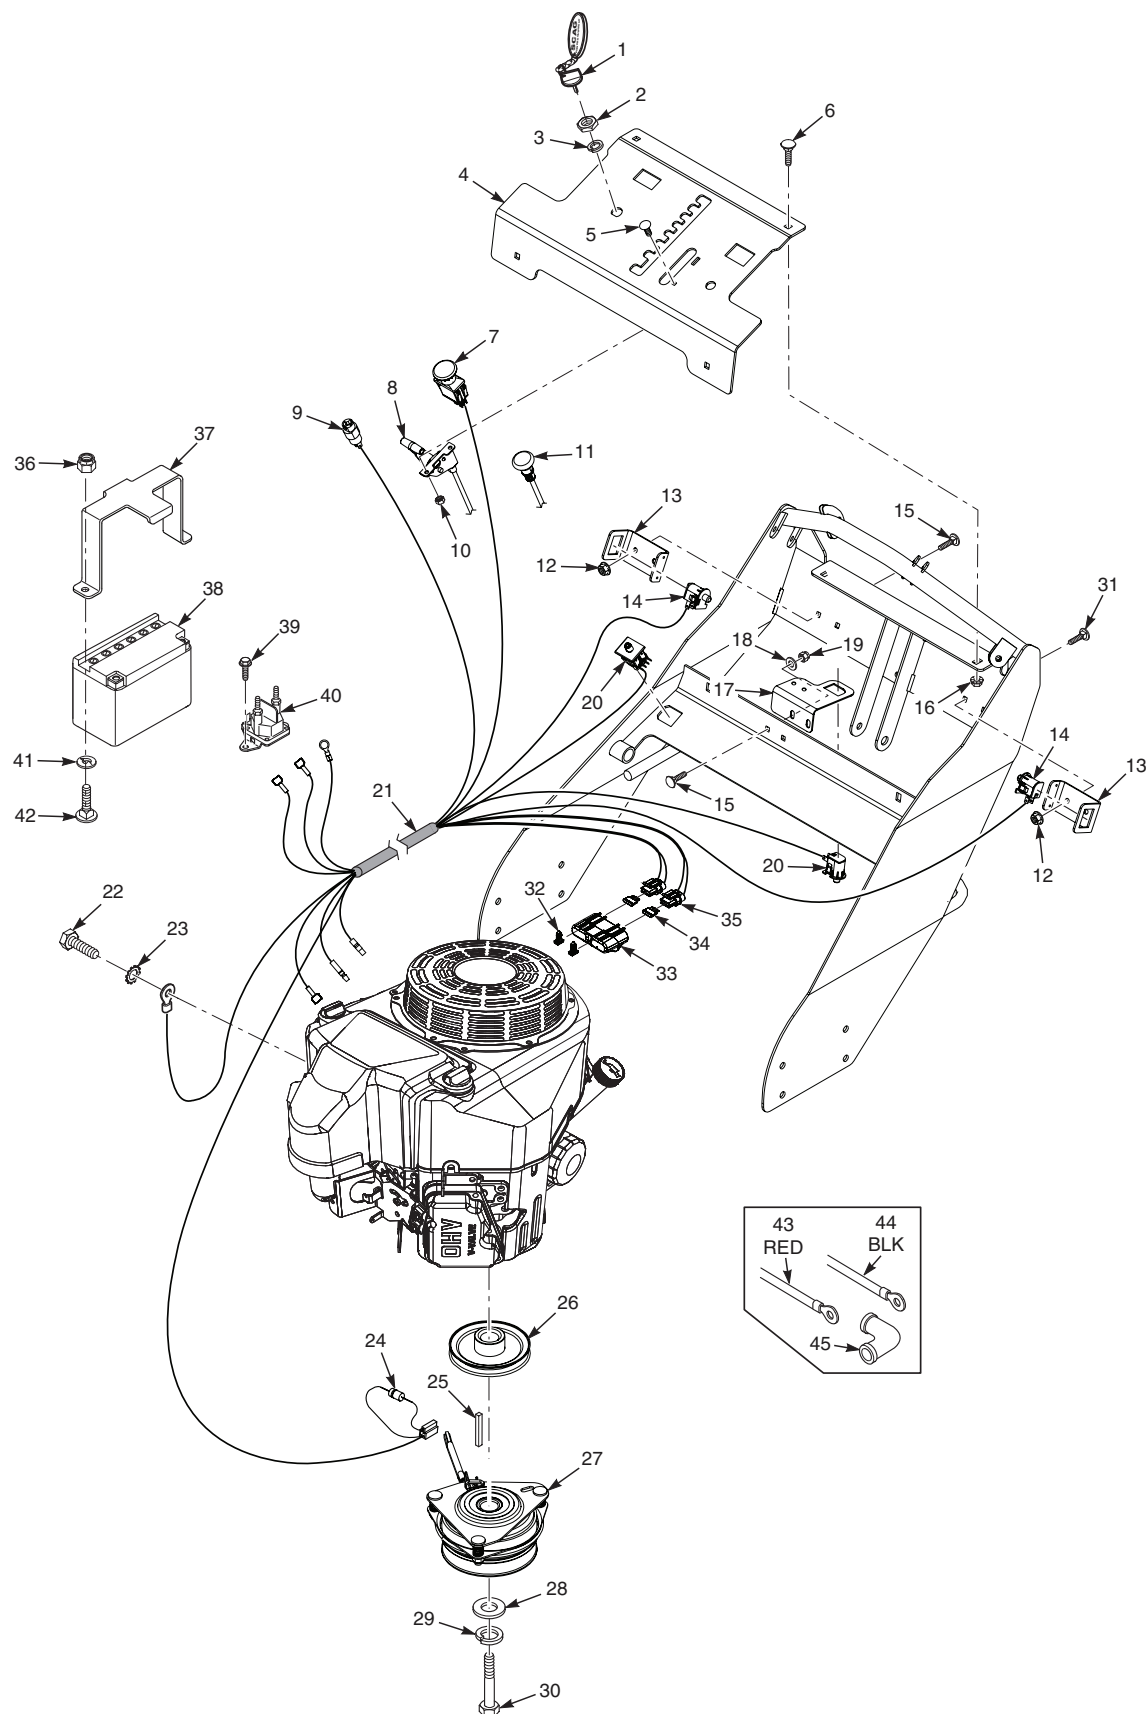

ELECTRICAL SYSTEM AND THROTTLE CONTROL - ELECTRIC START

Ref. No.	Part No.	Description
1	462069	Key Assembly w/Fob
	483609	Key w/Shroud
2	48017-04	Nut, 5/8-32 Special
3	48017-03	Lockwasher, 5/8" Internal Tooth
4	462684	Instrument Panel w/Decal
5	04003-43	Bolt, Carriage #10-24 x 1/2"
6	04003-12	Bolt, Carriage 5/16-18 x 3/4"
7	483957	PTO Switch
8	484665	Throttle Cable
9	48798	Key Switch
10	04021-26	Nut, Elastic Stop #10-24
11	483552	Choke Control
12	04019-02	Nut, Serrated Flange 1/4-20
13	425937	Bracket, Operator Presence Switch
14	48717	Switch
15	04003-02	Bolt, Carriage 1/4-20 x 3/4"
16	04019-03	Nut, Serrated Flange 5/16-18
17	426568	Bracket, Neutral Switch
18	04040-15	Flatwasher, 5/16-.375 x .875 x .083
19	04021-08	Nut, Elastic Stop 1/4-20
20	483473	Switch, Brake Interlock
21	485184	Wire Harness
22	04002-17	Bolt, Hex Head M8-1.25 x 14
23	04031-03	Lockwasher, 5/16" External Tooth
24	483958	Diode
25	04063-03	Key, 1/4 x 1/4 x 2-1/2"
26	484595	Pulley, 4-1/2" Dia. 1" Bore
27	462610	Electric Clutch Assembly
28	04041-28	Flatwasher, 7/16-.469 x 1.75 x .25
29	04030-05	Lockwasher, 7/16" spring
30	04102-06	Bolt, Hex Head 7/16-20 x 3" w/t Patch
31	04003-09	Bolt, Carriage 1/4-20 x 1-1/4"
32	482588	Clip, Wire
33	483571	Cover, Sealed Double
34	48298	Fuse, 20 Amp
35	483629	Fuse Holder
36	04021-10	Nut, Elastic Stop 5/16-18
37	426140	Bracket, Battery
38	484805	Battery (not available through Scag)
39	04011-14	Screw, Self Tapping 1/4-20 x 3/4"
40	483278	Solenoid, Sealed
41	04024-03	Nut, Push-On 5/16"
42	04003-04	Bolt, Carriage 5/16-18 x 1"
43	48029-09	Cable, Battery - Red
44	48029-25	Cable, Battery - Black
45	48126	Rubber Boot

SWZT FUEL SYSTEM

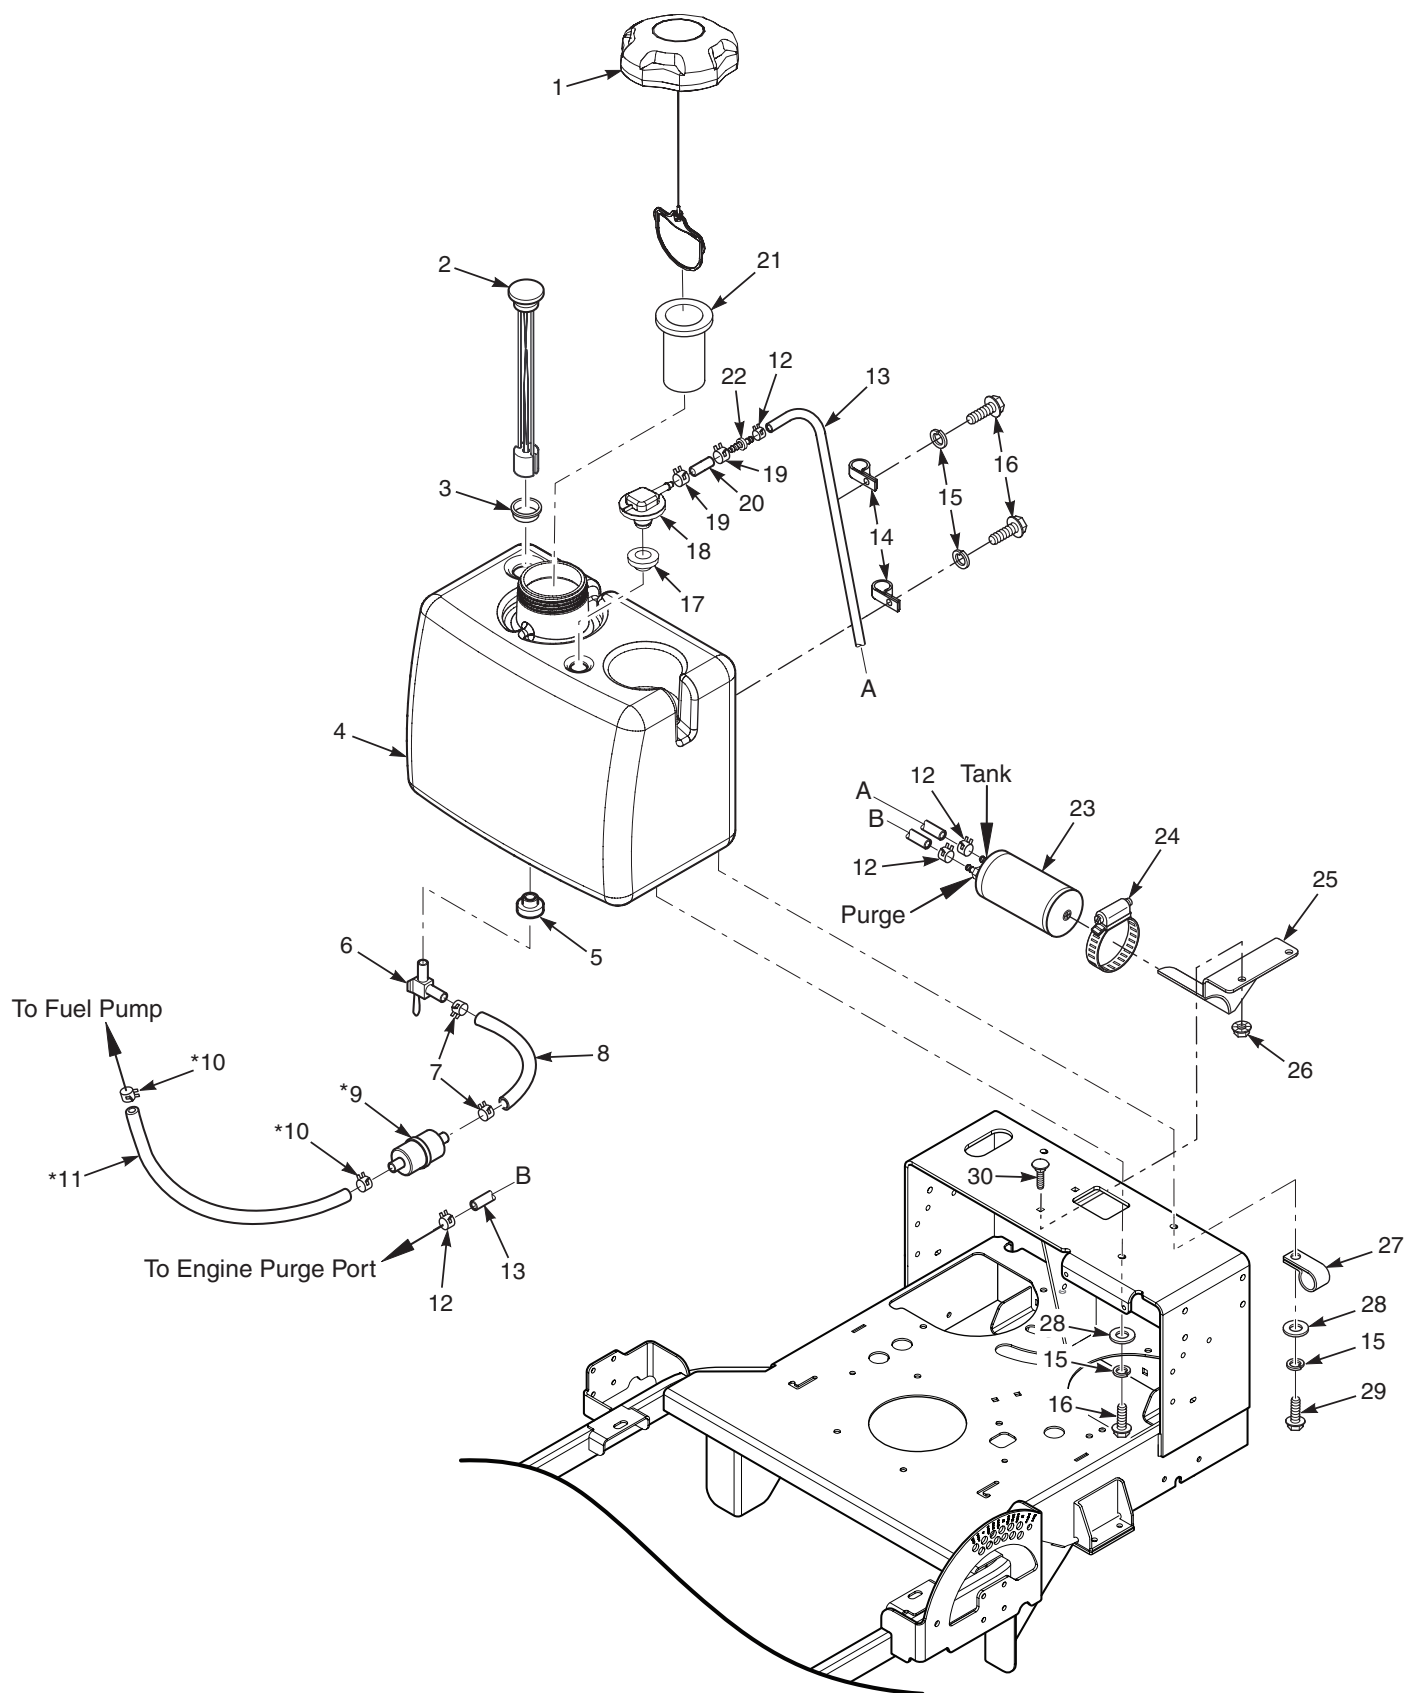


SWZT FUEL SYSTEM

Ref. No.	Part No.	Description
1	484286	Fuel Cap w/ Tether
	484297	Fuel Cap w/ Tether - California Models Only (not shown)
2	484259	Fuel Gauge Assembly (incl. #3)
3	484242	Seal, Fuel Gauge
4	462375	Fuel Tank Assembly (incl. #2, 3, 5, 6, 17, 18)
5	482571	Bushing, .56 Dia. Viton
6	483747	Ball Valve w/Screen
7	48059-01	Clamp, Fuel Hose
8	483617	Fuel Hose, 1/4" ID (order by inch)
9	*	Fuel Filter
10	*	Clamp, Fuel Hose
11	*	Fuel Hose
12	48059-05	Clamp, Vapor Recovery Hose 3/16"
13	484345	Hose, Vapor Recovery 3/16" (order by inch)
14	48030-22	Clamp, 3/8"
15	04030-03	Lockwasher, 5/16" Spring
16	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
17	484285	Grommet, Viton
18	484333	Fitting, Remote Vent
19	48059-02	Clamp, Fuel Hose 7/32" ID
20	484347	Hose, Vapor Recovery 1/4" (order by inch)
21	484279-01	Tube, Fuel Tank Insert - 4"
22	484343-01	Mender, 1/4 x 3/16 w/.02 Hole
23	484287	Carbon Canister
24	48136-17	Clamp
25	452176	Bracket, Canister Mounting
26	04019-03	Nut, Serrated Flange 5/16-18
27	48030-09	Clamp, 1/2"
28	04040-15	Flatwasher, 5/16-.375 x .875 x .083
29	04001-09	Bolt, Hex Head 5/16-18 x 1"
30	04003-12	Bolt, Carriage 5/16-18 X 3/4"

* = Available through engine manufacturer only.

ZT-2800 HYDRAULIC AXLE ASSEMBLY

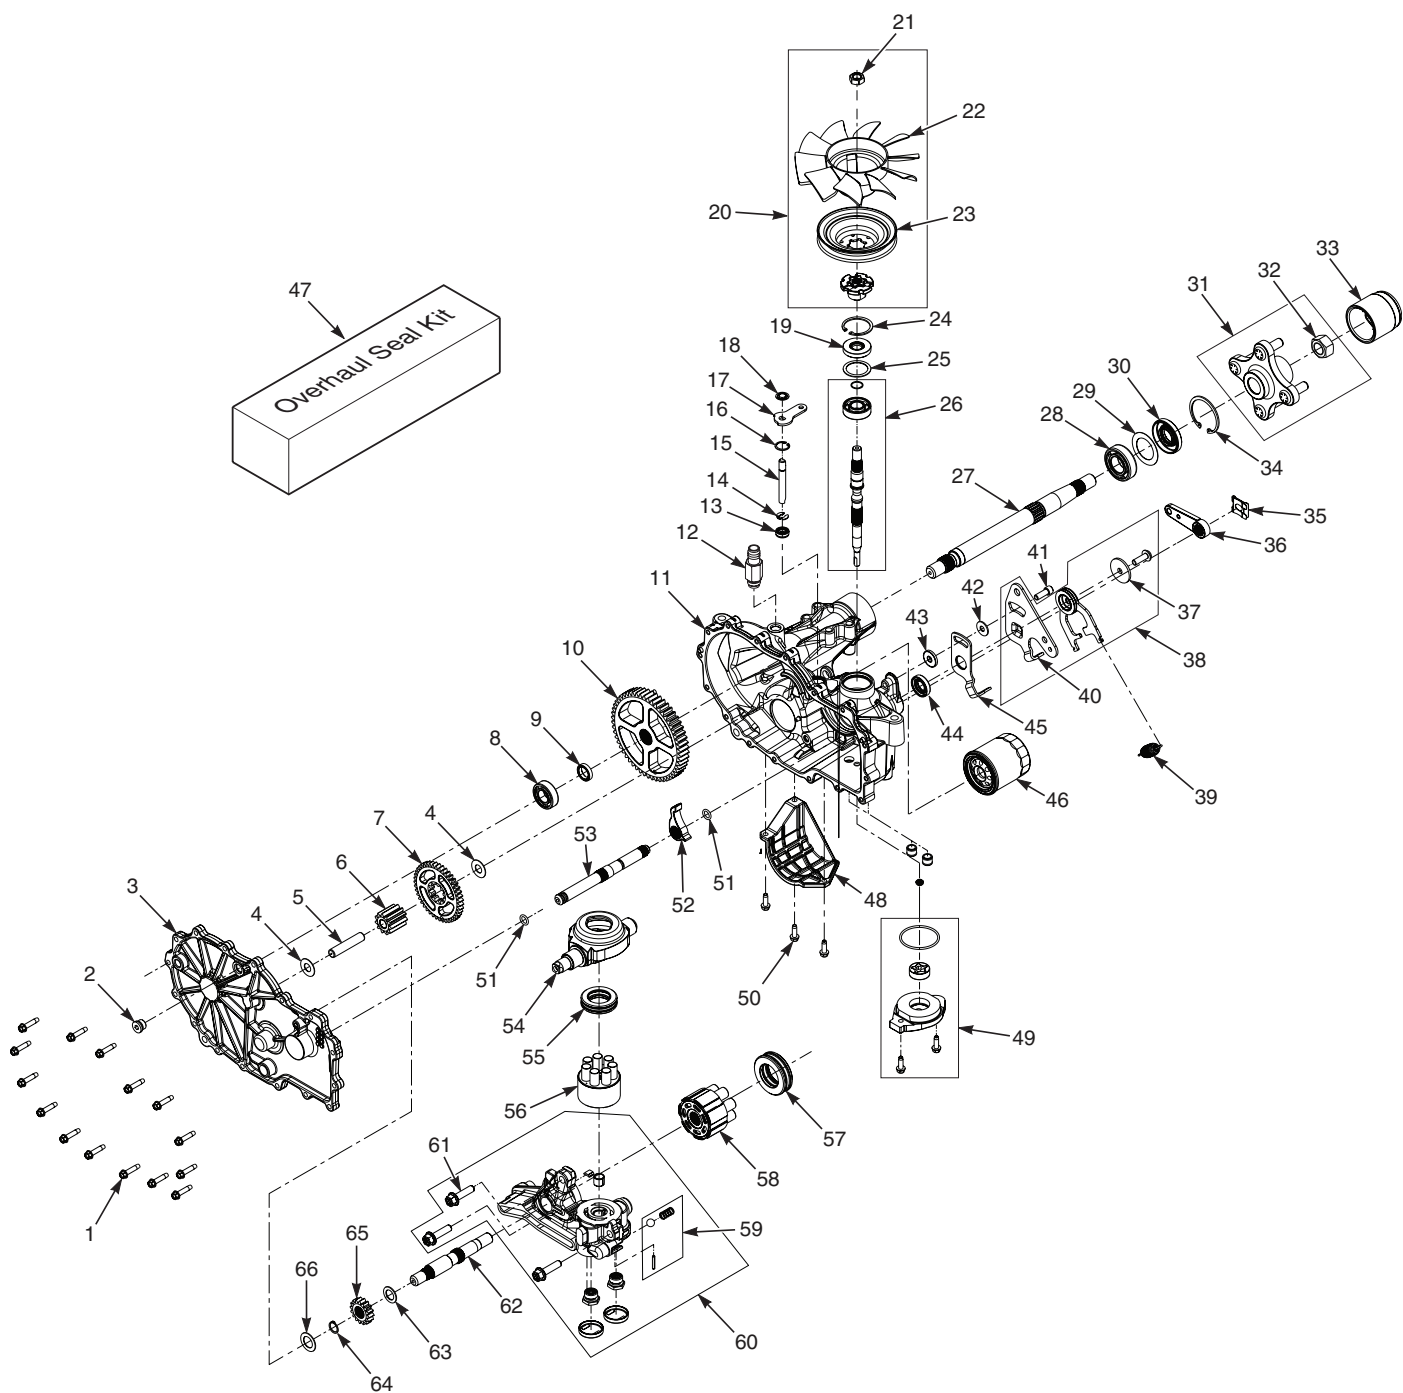

ZT-2800 HYDRAULIC AXLE ASSEMBLY

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	HG53246	Bolt, Hex Head 1/4-20 x 1-1/8"	35	HG52027	Clip, Retaining
2	HG9005110-5600	Plug, 9/16-18	36	HG53973	Handle, Brake
3	HG71574*	Kit, Side Cover *	37	HG51950	Washer, .343 x 1.5 x .062
	HG71572**	Kit, Side Cover **	38	HG71594*	Kit, RTN Assembly *
4	HG50132	Washer, .5 x 1.0 x .03		HG71589**	Kit, RTN Assembly **
5	HG51083	Jackshaft Pin	39	484600	Spring, RTN
6	HG52583	Gear, 11T	40	HG51842*	Arm, Control *
7	HG52148	Gear, 43T		HG51841**	Arm, Control **
8	HG44121	Bearing, Ball .75 x 40 x 12	41	HG51616	Bolt, 5/16-24 x 7/8" Patch
9	HG53336	Spacer, .75 x 1.32 x .257	42	HG44130	Washer, .34 x .88 x .06
10	HG52108	Gear, 54T	43	HG52527	Spacer, .320 x 1.005 x .150
11	HG71421*	Kit, Housing *	44	HG51140	Seal, Lip 12 x 32 x 7
	HG71413**	Kit, Housing **	45	HG72432*	Arm, Neutral *
12	482800-04	Fitting, Transmission		HG72431**	Arm, Neutral **
13	HG51626	Seal, Lip .375 x .75 x .25	46	HG52114	Filter
14	HG51628	Ring, .Retaining .375 External	47	HG71410	Seal Kit
15	HG52136	Rod, By-Pass	48	HG53644*	Filter Guard *
16	HG51627	Ring, Retaining .750 Internal		HG53655**	Filter Guard **
17	HG51629	Arm, By-Pass	49	HG72274	Kit, Charge Pump
18	HG51630	Ring, .Retaining .375 External	50	HG50752	Bolt, 1/4-20 x 3/4"
19	HG51161	Seal, Lip 17 x 40 x 7	51	HG51804	O-Ring
20	HG72124	Kit, Fan & Pulley	52	HG52766	Pawl, Brake
21	HG51244	Nut, Hex Locking 1/2-20	53	HG53539	Shaft, Brake
22	HG53821	Fan	54	HG51048	Trunnion Swashplate
23	HG53804	Pulley	55	HG50551	Thrust Bearing
24	HG50329	Ring, Retaining 2.06 Internal	56	HG70723	Kit, Cylinder Block
25	HG50951	Washer, 1.23 x 1.56 x .04	57	HG51462	Thrust Bearing
26	HG71442	Kit, Shaft, Input	58	HG71579	Kit, Motor Cylinder Block
27	HG71569	Kit, Shaft, Axle	59	HG71436	Kit, Charge Relief
28	HG53656	Bearing, Ball 1.0 x 52 x 15 Open	60	HG72412*	Kit, Center Section *
29	HG53514	Spacer, 1.355 x 2.035 x .021		HG72413**	Kit, Center Section **
30	HG53699	Seal, Lip TC4 1.0 x 2.06 x .38	61	HG52137	Bolt, Hex Head 3/8-16 x 1-1/2" Patch
31	HG71446	Hub Kit	62	HG52150	Shaft, Motor
32	HG50863	Nut, Hex Locking	63	HG51069	Washer, .72 x 1.16 x .04
33	HG53501	Cap, Axle	64	HG44145	Ring, Retaining
34	HG50859	Ring, Retaining 2.06 Internal	65	HG52149	Gear, 16T
			66	HG44371	Washer, .63 x 1.0 x .05


- NOTE -

Refer to label on transaxle for identification

*ZH-KMCC-3LUC-1MXX

**ZH-GMCC-3LUB-1MXX

REPLACEMENT DECALS AND INFORMATION PLATES

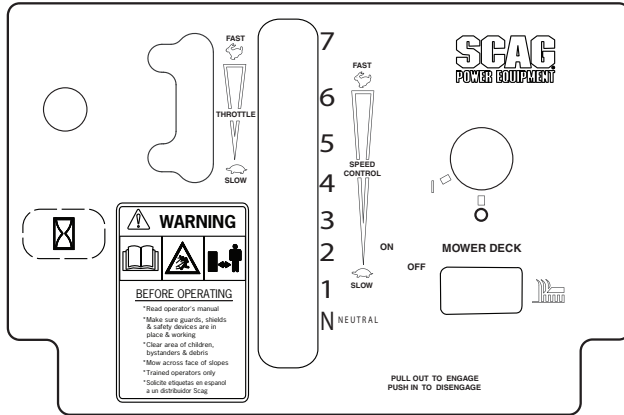


1




2



3

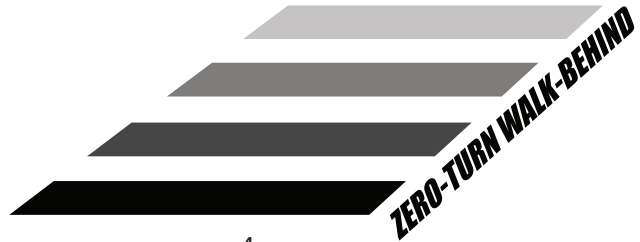


4

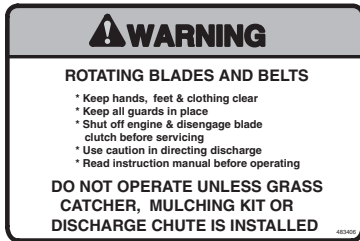

5



8

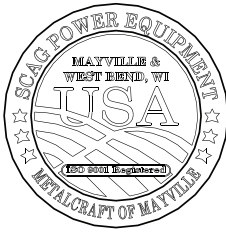


6




7




10

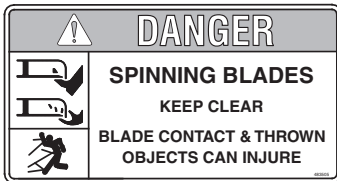

9

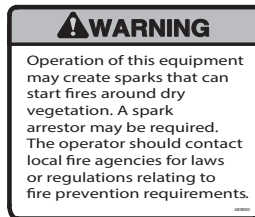

12

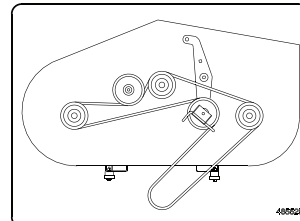

16




11


(supplied with California models only)



14

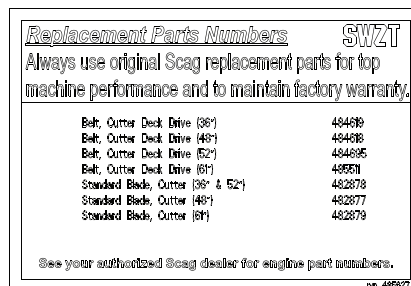

15

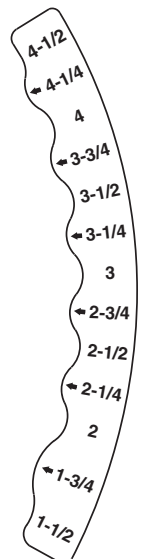


13

REPLACEMENT DECALS AND INFORMATION PLATES

Ref. No.	Part No.	Description
1	484662	Decal, Instrument Panel (Manual Start)
	485185	Decal, Instrument Panel (Electric Start Only)
2	48314	Decal, Scag Logo
3	483402	Decal, Belt Cover
4	484673	Decal, Handle - LH
	484674	Decal, Handle - RH
5	483406	Decal, Warning-Rotating Blades
6	485403	Decal, Metalcraft - USA
7	483710	Decal, 36 Commercial
	483494	Decal, 48 Commercial
	483495	Decal, 52 Commercial
8	484453	Decal, Scag Heavy Duty
9	483505	Decal, Spinning Blades
10	483404	Decal, Sulky Attachment
11	483727	Decal, Scag Logo
12	483900	Decal, Warning Spark Arrestor
13	484661	Decal, Height of Cut
14	483405	Decal, Warning
15	485627	Decal, SWZT Replacement Parts
16	485525	Decal, Belt Routing
*	461986	Spanish Decal Kit (not shown)

 (shown with the Key Off, PTO Off, Parking Brake Applied, Speed Control in Neutral, OPC Disengaged)



SWZT ELECTRICAL SCHEMATIC - ELECTRIC START

(shown with the Key Off, PTO Off, Parking Brake Applied, Speed Control in Neutral, OPC Disengaged)

