



**Count on it.**

Form No. 3428-317 Rev A

# Parts Catalog

## Commercial Walk-Behind Mower Fixed Deck Pistol Grip Gear Drive with 36in TURBO FORCE® Cutting Unit

Model No. 39634—Serial No. 404325000 and Up

**09 - SERIAL: 407195784**

**ENGINE: KAWASAKI FS481V-GS06-R**

OIL FILTER: \_\_\_\_\_

GAS FILTER: \_\_\_\_\_

AIR FILTER: \_\_\_\_\_

BLADE BELT: \_\_\_\_\_

BLADE: \_\_\_\_\_

DRIVE BELT: \_\_\_\_\_

**DISCLAIMER: THE CONTENTS OF THIS MANUAL HAVE BEEN MODIFIED FROM  
ITS ORIGINAL VERSION.**



# Contents

Engine and Exhaust Assembly..... 4

Fuel System Assembly ..... 6

Frame and Transmission Assembly ..... 7

Drive Wheel and Brake Assembly ..... 9

Handle Control Assembly ..... 11

Handle Assembly ..... 12

Deck Assembly ..... 13

Deck Decal Assembly No. 110-4907..... 14


Deflector Assembly No. 119-6530..... 15

Sheave, Spindle and Blade Assembly ..... 16

Idler Assembly ..... 17

Caster Assembly ..... 18

Attachments and Accessories ..... 19

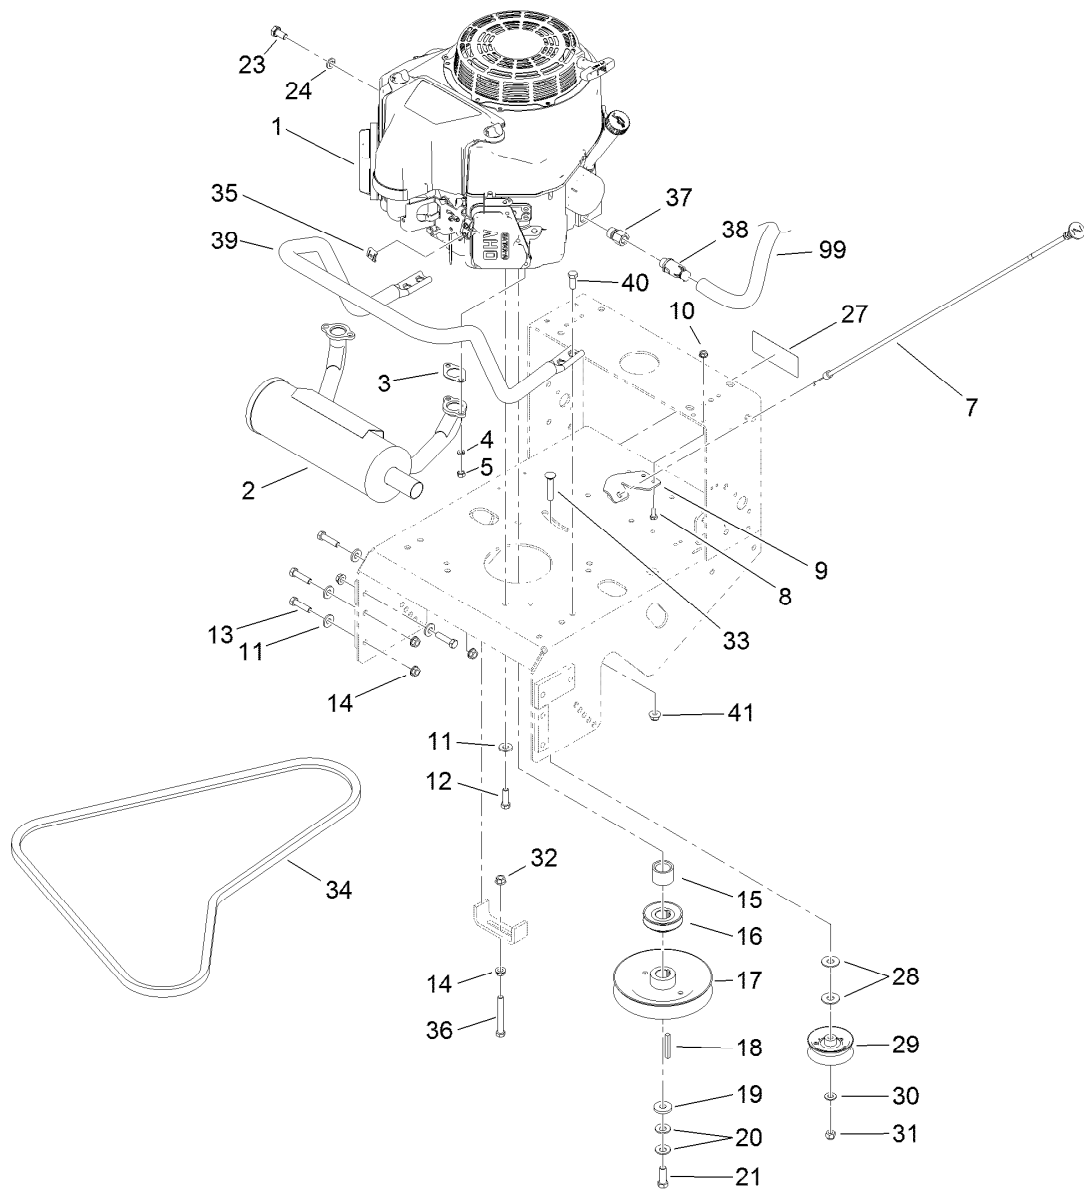


## Engine and Exhaust Assembly

| Ref. | Part Number | Qty. | Description                     |
|------|-------------|------|---------------------------------|
| 1    |             | 1    | Engine-Kawasaki, Fs481V-As06 ●■ |
| 2    | 116-3734    | 1    | Muffler-Horizontal, Offset      |
| 3    | 1-653313    | 2    | Gasket-Exhaust                  |
| 4    | 114-3550    | 4    | Washer-Lock                     |
| 5    | 114-3549    | 4    | Nut                             |
| 7    | 103-1796    | 1    | Cable-Choke                     |
| 8    | 321-3       | 2    | Screw-HH                        |
| 9    | 103-1797-01 | 1    | Bracket-Cable, Choke            |
| 10   | 32128-33    | 2    | Nut-HF                          |
| 11   | 98-5975     | 12   | Washer-Belleville               |
| 12   | 323-7       | 4    | Screw-HH                        |
| 13   | 323-8       | 8    | Screw-HH                        |
| 14   | 3290-357    | 9    | Nut-HHF, Whiz                   |
| 15   | 1-633453    | 1    | Spacer-Clutch                   |
| 16   | 103-1666    | 1    | Sheave-Transmission             |
| 17   | 110-4891    | 1    | Pulley                          |
| 18   | 103-4177    | 1    | Key                             |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 19   | 1-373034    | 1    | Washer               |
| 20   | 1-603610    | 2    | Washer-Spring        |
| 21   | 116-3702    | 1    | Screw-HH             |
| 23   | 33114-016   | 1    | Screw-HH             |
| 24   | 3253-4      | 1    | Washer-Lock          |
| 27   | 126-1400    | 1    | Decal-Warning, Sulky |
| 28   | 3256-5      | 2    | Washer-Flat          |
| 29   | 130-8362    | 1    | Pulley-Idler, Flat   |
| 30   | 3256-24     | 1    | Washer-Flat          |
| 31   | 3296-39     | 1    | Nut-Lock, NI         |
| 32   | 32128-21    | 1    | Nut-HF               |
| 33   | 3231-6      | 1    | Screw-CARR           |
| 34   | 110-4886    | 1    | Belt-V               |
| 35   | 81-1690     | 1    | Clamp-Cable          |
| 36   | 323-14      | 1    | Screw-HH             |
| 37   | 103-1966    | 1    | Adapter              |
| 38   | 120-4321    | 1    | Valve-Drain, Oil     |
| 39   | 116-6278-03 | 1    | Guard-Muffler        |

● Not serviced separately

■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)

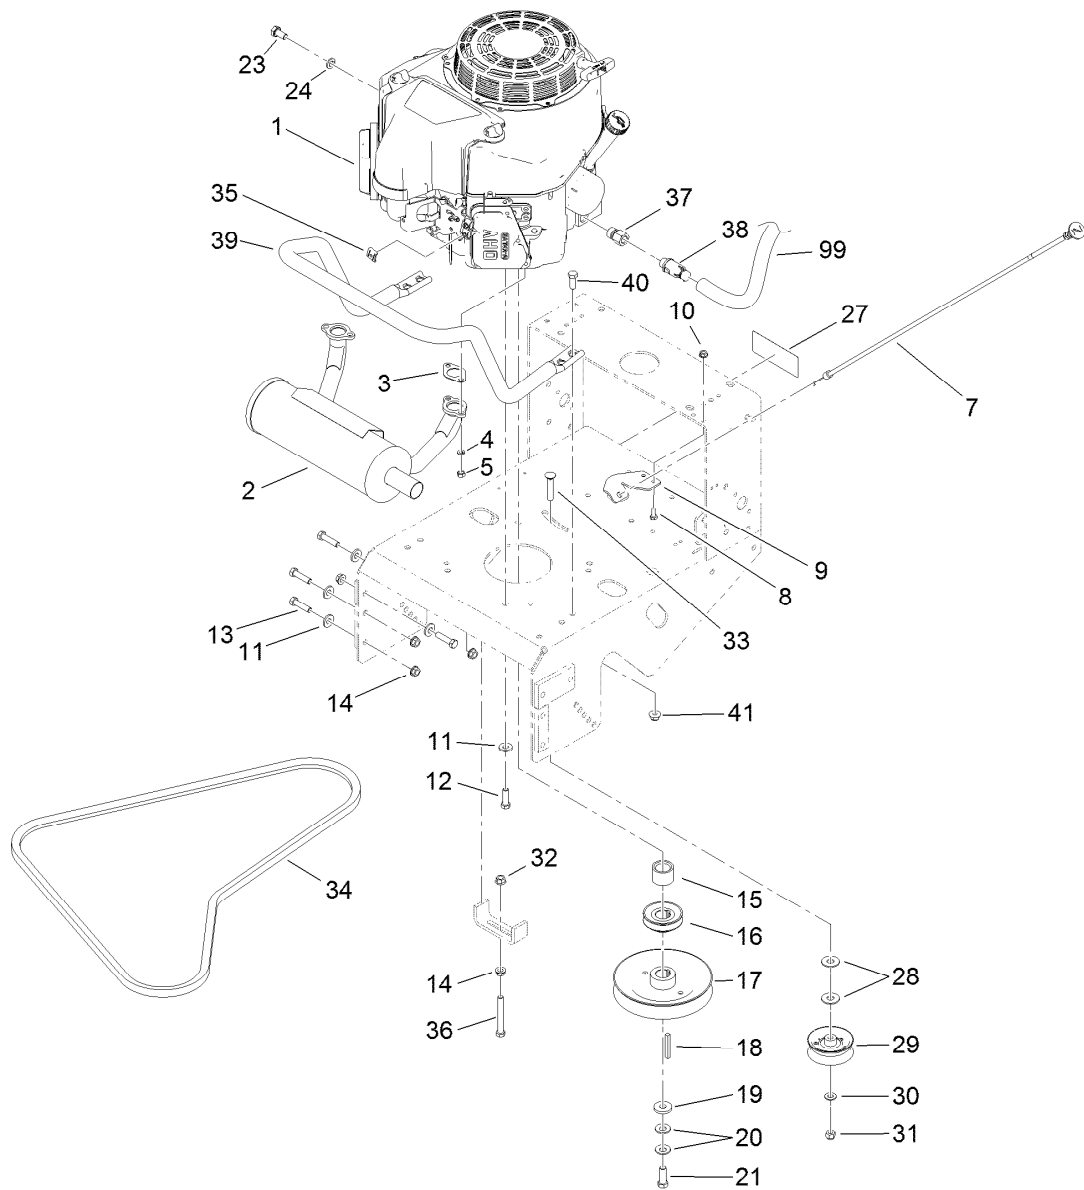

## Engine and Exhaust Assembly (continued)

| Ref. | Part Number | Qty. | Description |
|------|-------------|------|-------------|
| 40   | 323-6       | 4    | Screw-HH    |


| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 41   | 104-8301    | 4    | Nut-HF, NI      |
| 99   | 103-1964    | 1    | Hose-Drain, Oil |

● Not serviced separately

■ Obtain parts from [www.kawpowerepc.com](http://www.kawpowerepc.com)




| <b>Ref.</b> | <b>Part Number</b> | <b>Qty.</b> | <b>Description</b>       |
|-------------|--------------------|-------------|--------------------------|
| 17          | 104-7201           | 4           | Nut-HF                   |
| 18          | 115-4486-01        | 1           | Bracket-Canister, Carbon |
| 19          | 114-0292           | 1           | Bracket-Canister, Carbon |
| 20          | 321-2              | 2           | Screw-HH                 |
| 21          | 117-1221           | 1           | Canister-Carbon, 800Cc   |
| 22          | 115-0962           | 1           | Hose-Vent, Canister      |
| 23          | 99-9415            | 1           | Hose-Fuel                |
| 24          | 114-0286           | 1           | Hose-Vent                |
| 25          | 3290-378           | 3           | Tie-Cable                |
| 26          | 116-2231           | 1           | Hose-Vent, Formed        |
| 27          | 116-2232           | 1           | Valve-Control, Vacuum    |
| 28          | 119-8501           | 1           | Hose-Vent, Formed        |
| 29          | 119-8502           | 1           | Hose-Vent, Formed        |

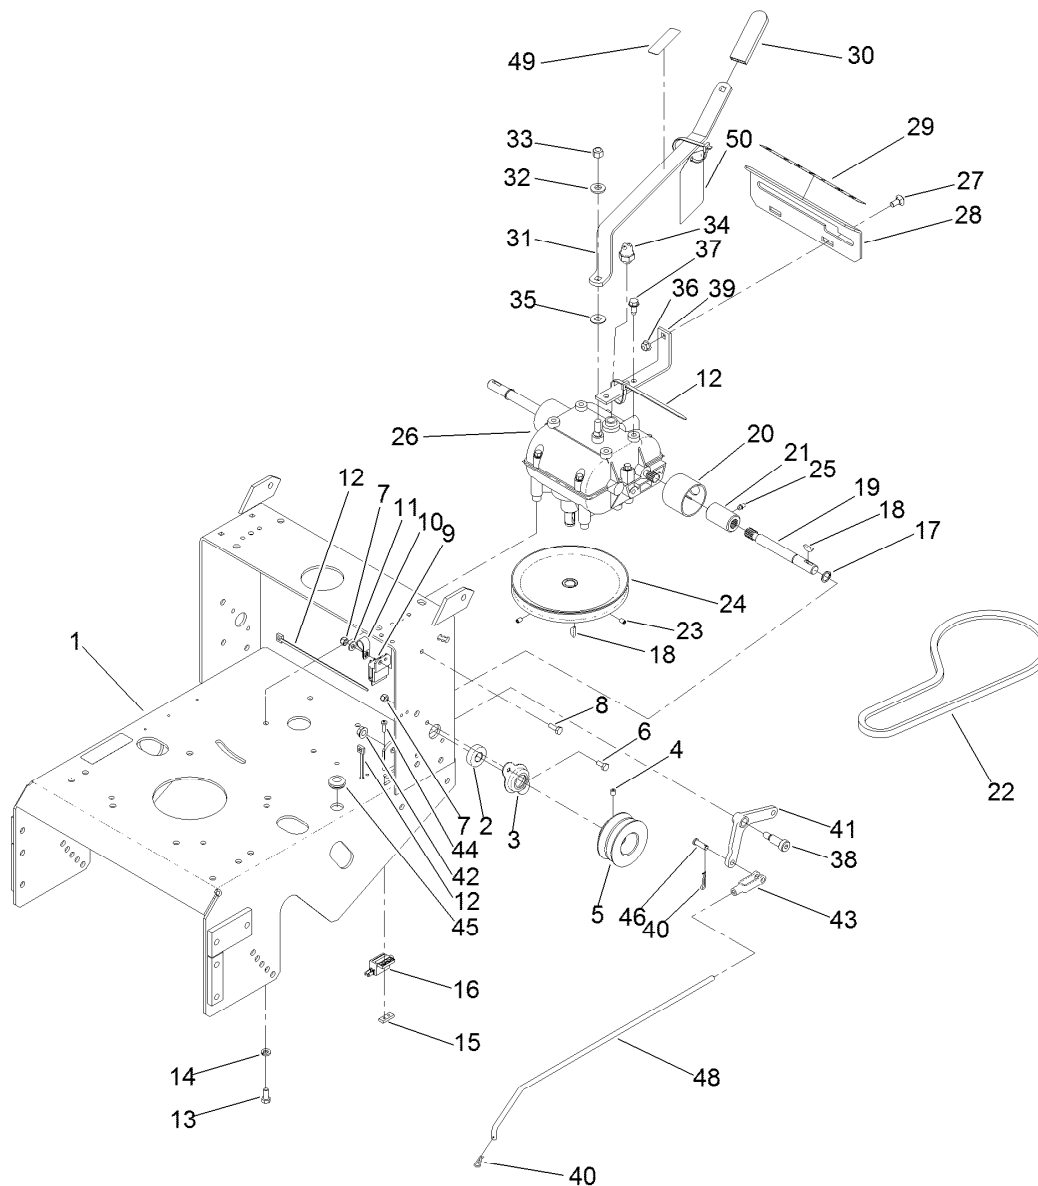

## Frame and Transmission Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 116-6084-01 | 1    | Frame-Gear            |
| 2    | 1-323252    | 2    | Bearing-Shaft         |
| 3    | 1-323254    | 2    | Flange-Output         |
| 4    | 3246-18     | 2    | Setscrew              |
| 5    | 103-6511    | 2    | Sheave-Transmission   |
| 6    | 321-3       | 4    | Screw-HH              |
| 7    | 3296-42     | 5    | Nut-Lock, NI          |
| 8    | 321-4       | 1    | Screw-HH              |
| 9    | 1-323430    | 1    | Module-Interlock      |
| 10   | 1-513762    | 1    | Clip-Loom             |
| 11   | 3256-22     | 1    | Washer-Flat           |
| 12   | 1-303335    | 3    | Tie-Plastic           |
| 13   | 322-3       | 4    | Screw-HH              |
| 14   | 1-805005    | 4    | Washer-Lock           |
| 15   | 1-633181    | 1    | Plate-Tapped          |
| 16   | 1-513051    | 1    | Switch-Open, Normally |
| 17   | 32151-62    | 2    | Ring-Retaining        |
| 18   | 3257-5      | 3    | Key-Woodruff          |
| 19   | 1-323502    | 2    | Shaft-Transmission    |
| 20   | 51-4220     | 2    | Guard-Coupler         |
| 21   | 1-323680    | 2    | Coupler               |


| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 22   | 1-323630    | 1    | V-Belt                |
| 23   | 3245-41     | 2    | Screw-HSH             |
| 24   | 1-323278    | 1    | Sheave-Transmission   |
| 25   | 302-19      | 2    | Fitting-Grease        |
| 26   | 137-4105    | 1    | Transmission-5 Speed  |
| 27   | 3230-1      | 2    | Bolt-CARR             |
| 28   | 1-323387-03 | 1    | Plate-Shift           |
| 29   | 105-4104    | 1    | Decal-Speed, Ground   |
| 30   | 1-303020    | 1    | Grip-Lever            |
| 31   | 98-3274-03  | 1    | Lever-Shift           |
| 32   | 98-5975     | 1    | Washer-Belleville     |
| 33   | 3296-6      | 1    | Nut-Lock              |
| 34   | 1-303282    | 1    | Switch-Start, Neutral |
| 35   | 1-323379    | 1    | Washer                |
| 36   | 104-8300    | 2    | Nut-HF, NI            |
| 37   | 32144-11    | 4    | Screw-Thd Roll, HWH   |
| 38   | 1-603403    | 1    | Bolt-Shoulder         |
| 39   | 1-323389-03 | 2    | Bracket-Plate, Shift  |
| 40   | 1-806003    | 2    | Pin-Cotter            |
| 41   | 1-303186    | 1    | Bellcrank             |
| 42   | 3290-357    | 1    | Nut-HHF, Whiz         |

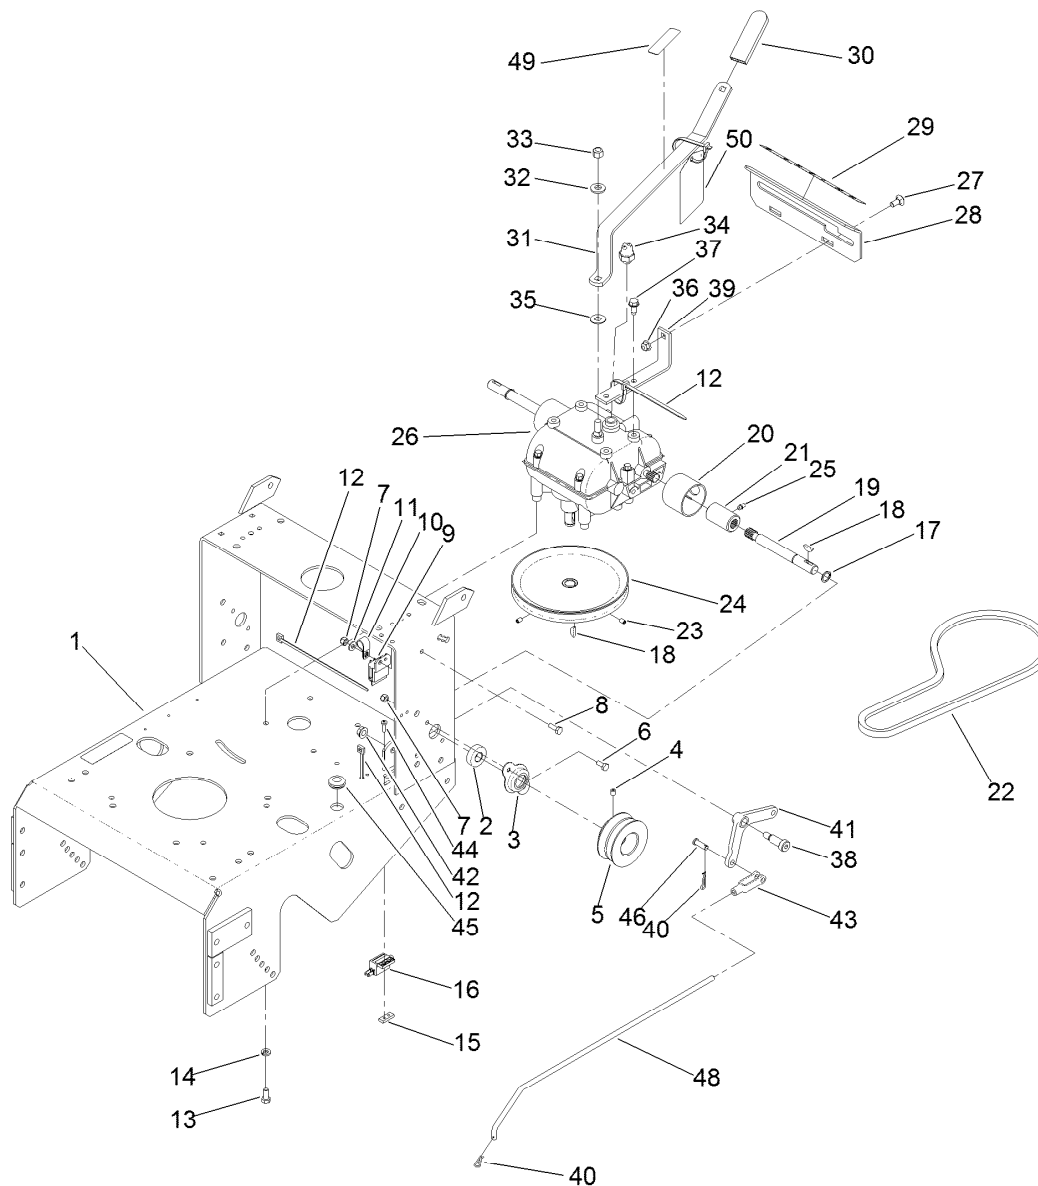

## Frame and Transmission Assembly (continued)

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 43   | 1-303105    | 1    | Yoke-Adjustable |
| 44   | 3290-500    | 2    | Screw-PPH       |
| 45   | 1-543296    | 1    | Grommet         |
| 46   | 1-808280    | 1    | Pin-Clevis      |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 48   | 1-323303    | 1    | Arm-Assist, Linkage    |
| 49   | 132-4708    | 1    | Decal-Caution, Gearbox |
| 50   | 132-4712    | 1    | Hang Tag-Gearbox       |

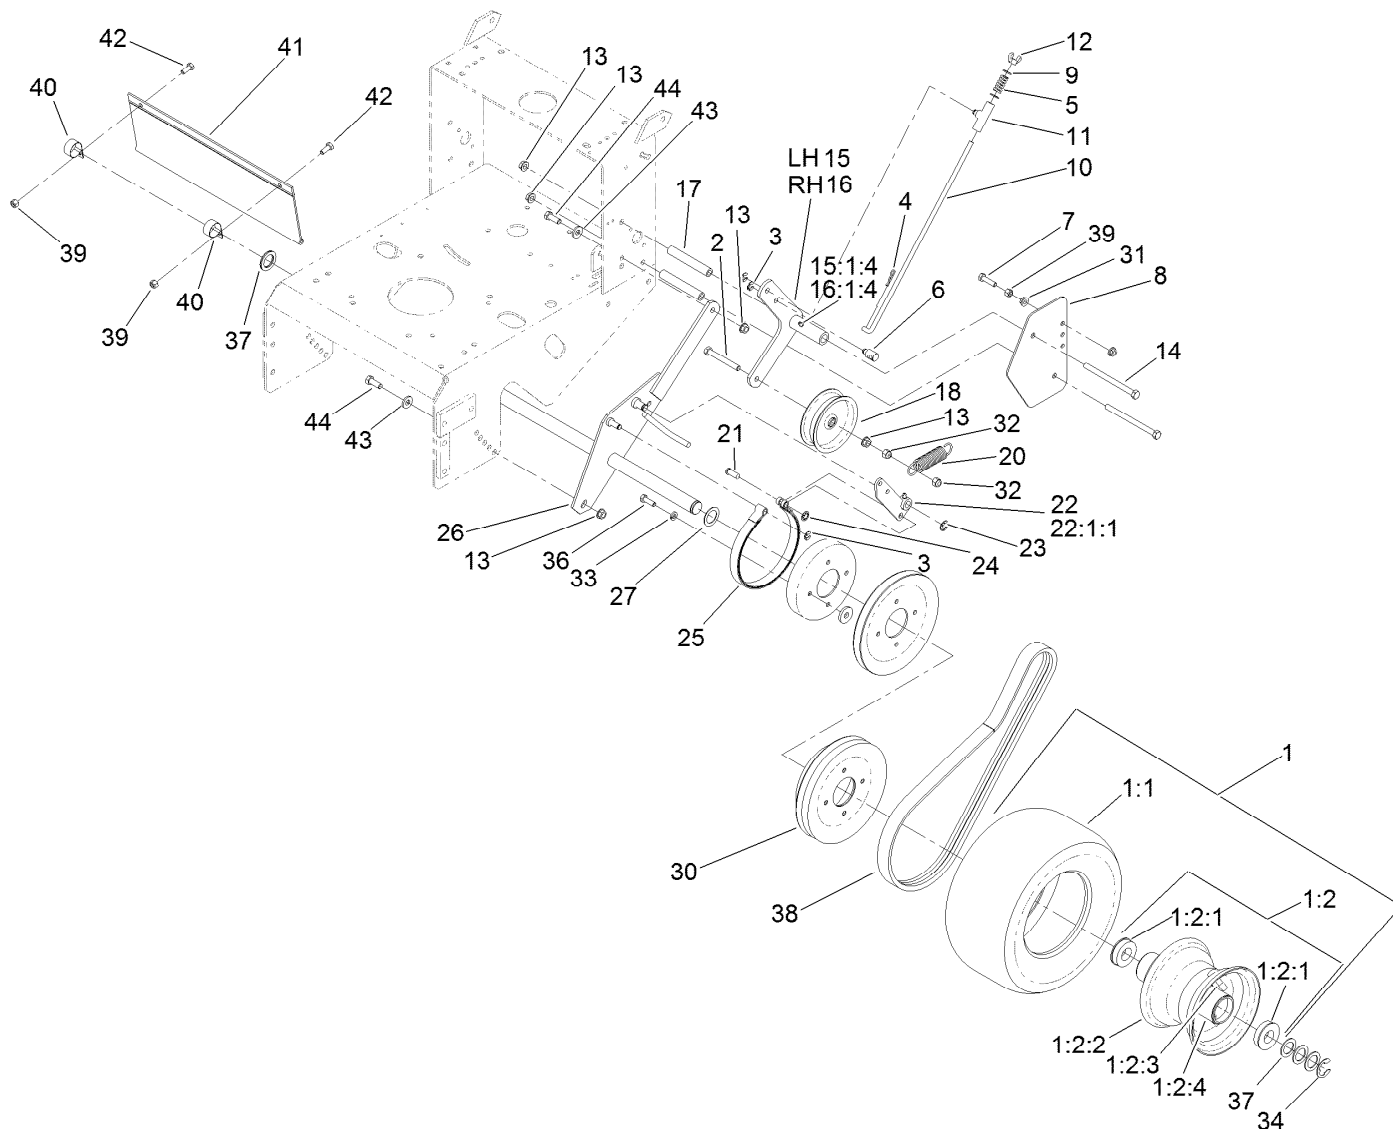


## Drive Wheel and Brake Assembly

| Ref.  | Part Number | Qty. | Description         |
|-------|-------------|------|---------------------|
| 1     | 130-8363    | 2    | Wheel And Tire ASM  |
| 1:1   | 130-8367    | 1    | Tire                |
| 1:2   | 130-4565    | 1    | Wheel And Hub ASM   |
| 1:2:1 | 1-323329    | 2    | Bearing-Flanged     |
| 1:2:2 |             | 1    | Rim ASM ●           |
| 1:2:3 |             | 1    | Fitting-Grease ●    |
| 1:2:4 |             | 1    | Stem-Valve ●        |
| 2     | 99-8664     | 2    | Screw-HH            |
| 3     | 32151-47    | 6    | Ring-Retaining      |
| 4     | 1-806003    | 2    | Pin-Cotter          |
| 5     | 1-323245    | 2    | Spring-Compression  |
| 6     | 103-1864    | 2    | Swivel-Lever, Drive |
| 7     | 116-3515    | 2    | Screw-HH, Special   |
| 8     | 1-323287-01 | 2    | Shield-Wheel, Drive |
| 9     | 3256-23     | 4    | Washer-Plain        |
| 10    | 132-4723    | 2    | Linkage-Brake       |
| 11    | 110-5866    | 2    | Swivel-Brake        |
| 12    | 1-513959    | 2    | Wingnut-Nylock      |

| Ref.   | Part Number | Qty. | Description              |
|--------|-------------|------|--------------------------|
| 13     | 3290-357    | 10   | Nut-HHF, Whiz            |
| 14     | 323-39      | 4    | Screw-HH                 |
| 15     | 116-7542-03 | 1    | Arm-Idler, LH            |
| 15:1:4 | 302-19      | 1    | Fitting-Grease           |
| 16     | 116-7543-03 | 1    | Arm-Idler, RH            |
| 16:1:4 | 302-19      | 1    | Fitting-Grease           |
| 17     | 1-323283    | 4    | Spacer-Shield            |
| 18     | 119-7887    | 2    | Pulley-Idler             |
| 20     | 1-603402    | 2    | Spring-Extension         |
| 21     | 1-323307    | 2    | Pin-Clevis               |
| 22     | 103-1611-03 | 2    | Arm-Brake                |
| 22:1:1 | 1-324154    | 1    | Bushing-Zerk             |
| 23     | 32120-47    | 2    | Ring-Retaining, External |
| 24     | 1-803051    | 2    | Ring-Retain              |
| 25     | 1-323262    | 2    | Band-Brake               |
| 26     | 1-322117-03 | 1    | Axle                     |
| 27     | 1-543436    | 2    | Washer-Spacer            |
| 30     | 109-4359    | 2    | Drum And Sheave ASM      |

● Not serviced separately

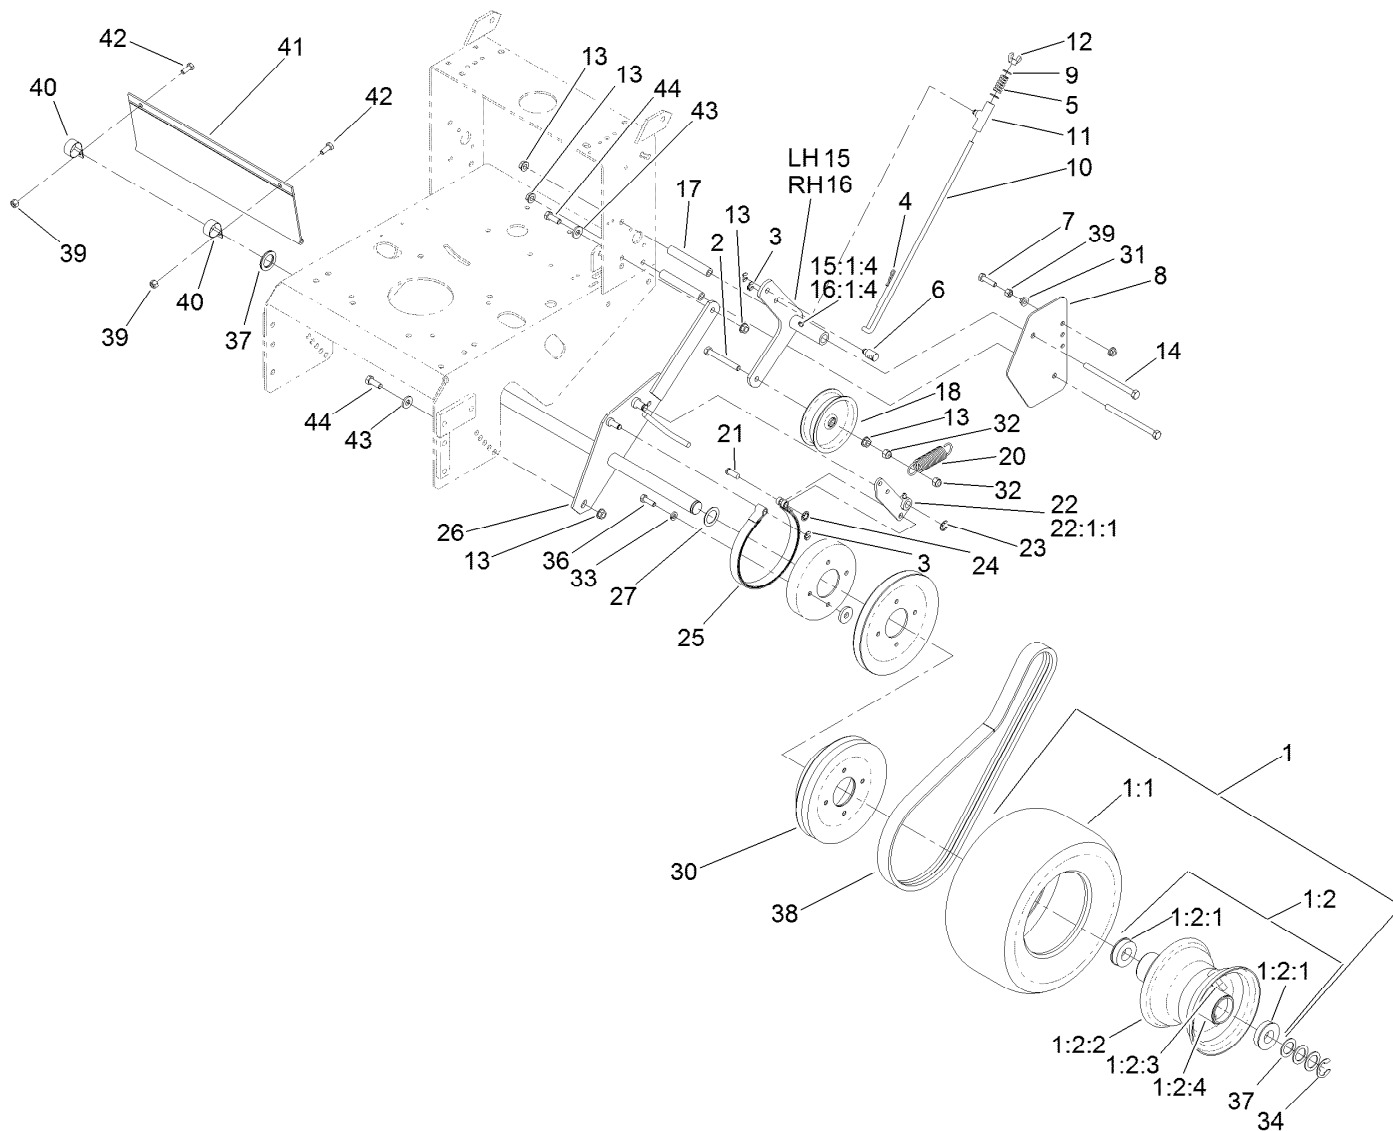


## Drive Wheel and Brake Assembly (continued)

| Ref. | Part Number | Qty. | Description   |
|------|-------------|------|---------------|
| 31   | 32128-20    | 4    | Nut-HF        |
| 32   | 3296-39     | 4    | Nut-Lock, NI  |
| 33   | 1-805005    | 8    | Washer-Lock   |
| 34   | 1-808519    | 2    | Ring-Snap     |
| 36   | 322-5       | 8    | Screw-HH      |
| 37   | 1-523157    | 6    | Washer-Spacer |
| 38   | 1-323631    | 2    | V-Belt        |

| Ref. | Part Number | Qty. | Description       |
|------|-------------|------|-------------------|
| 39   | 3296-29     | 4    | Nut-Lock, NI      |
| 40   | 2412-104    | 2    | Clamp-R           |
| 41   | 98-3259     | 1    | Shield-Trailing   |
| 42   | 322-3       | 2    | Screw-HH          |
| 43   | 98-5975     | 4    | Washer-Belleville |
| 44   | 323-6       | 4    | Screw-HH          |


● Not serviced separately

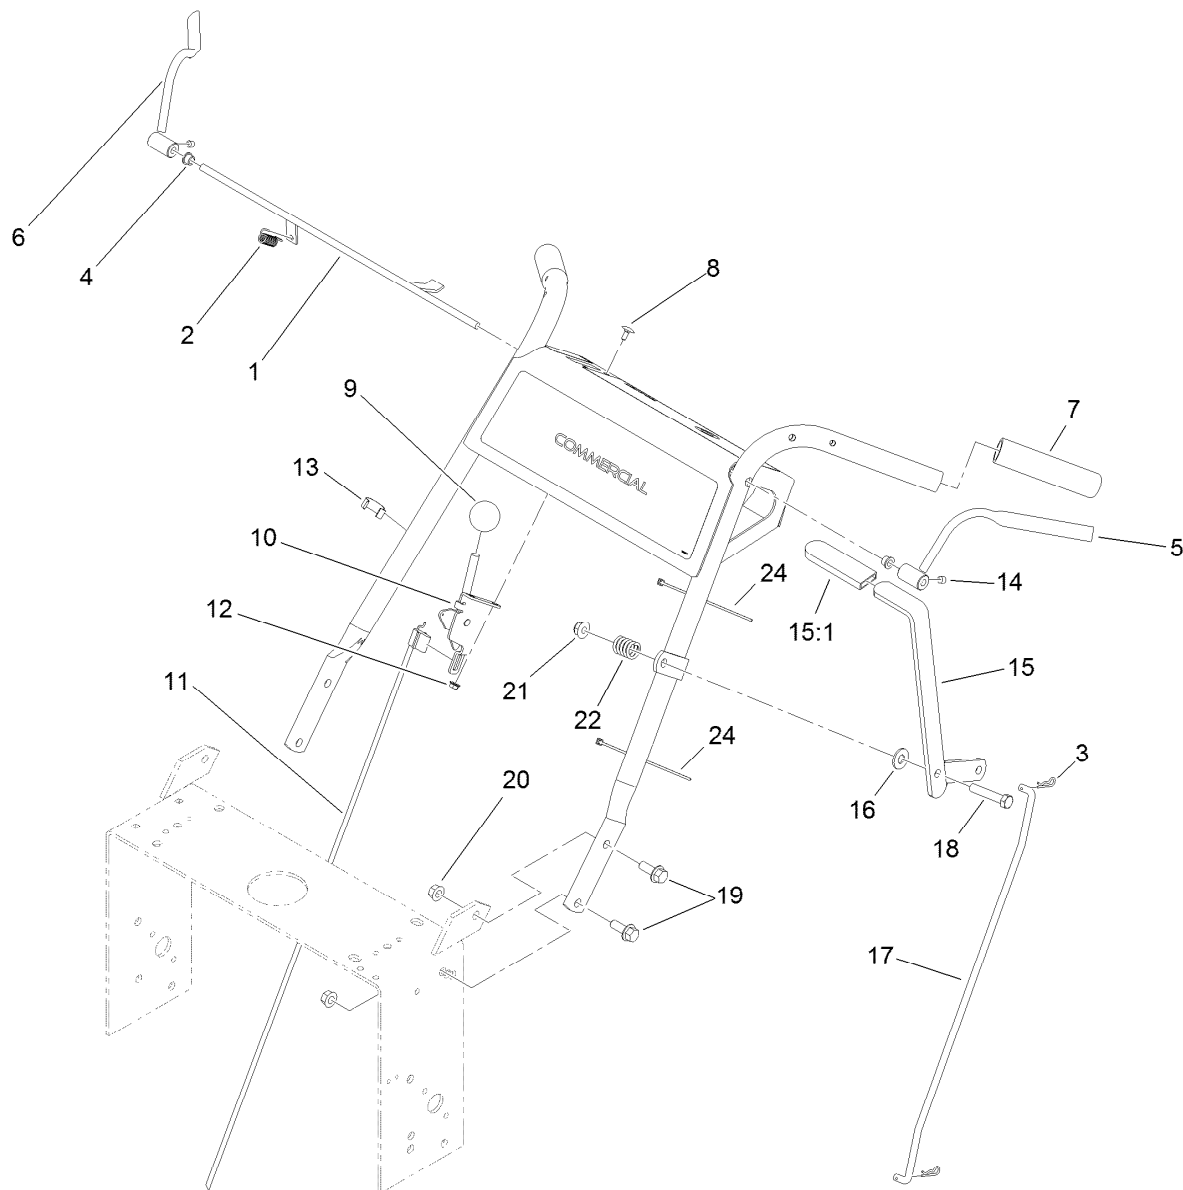

## Handle Control Assembly

| Ref. | Part Number | Qty. | Description                            |
|------|-------------|------|----------------------------------------|
| 1    | 106-2717-03 | 1    | Rod-Control, Operator Presence         |
| 2    | 1-303363    | 1    | Spring-Extension                       |
| 3    | 1-806003    | 2    | Pin-Cotter                             |
| 4    | 1-303365    | 2    | Bushing-Nylon                          |
| 5    | 106-5485    | 1    | LH Operator Presence Control Lever ASM |
| 6    | 106-5486    | 1    | RH Operator Presence Control Lever ASM |
| 7    | 104-9838    | 2    | Grip-Foam                              |
| 8    | 1-807513    | 2    | Bolt-CARR                              |
| 9    | 1-603175    | 1    | Knob-Ball                              |
| 10   | 110-5547    | 1    | Lever-Control                          |
| 11   | 119-1823    | 1    | Cable-Control, Throttle                |

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 12   | 32128-17    | 2    | Nut-Lock, Flange     |
| 13   | 1-303088    | 1    | Clip-Cable           |
| 14   | 1-803322    | 2    | Screw-Set            |
| 15   | 116-6331    | 1    | Lever ASM            |
| 15:1 | 1-303020    | 1    | Grip-Lever           |
| 16   | 3256-4      | 1    | Washer-Flat          |
| 17   | 1-323298    | 1    | Linkage-Blade, Upper |
| 18   | 323-10      | 1    | Screw-HH             |
| 19   | 32128-21    | 4    | Nut-HF               |
| 20   | 3234-11     | 4    | Screw-HHF            |
| 21   | 104-8301    | 1    | Nut-HF, NI           |
| 22   | 1-303160    | 1    | Spring-Compression   |
| 24   | 1-303287    | 2    | Tie-Cable            |

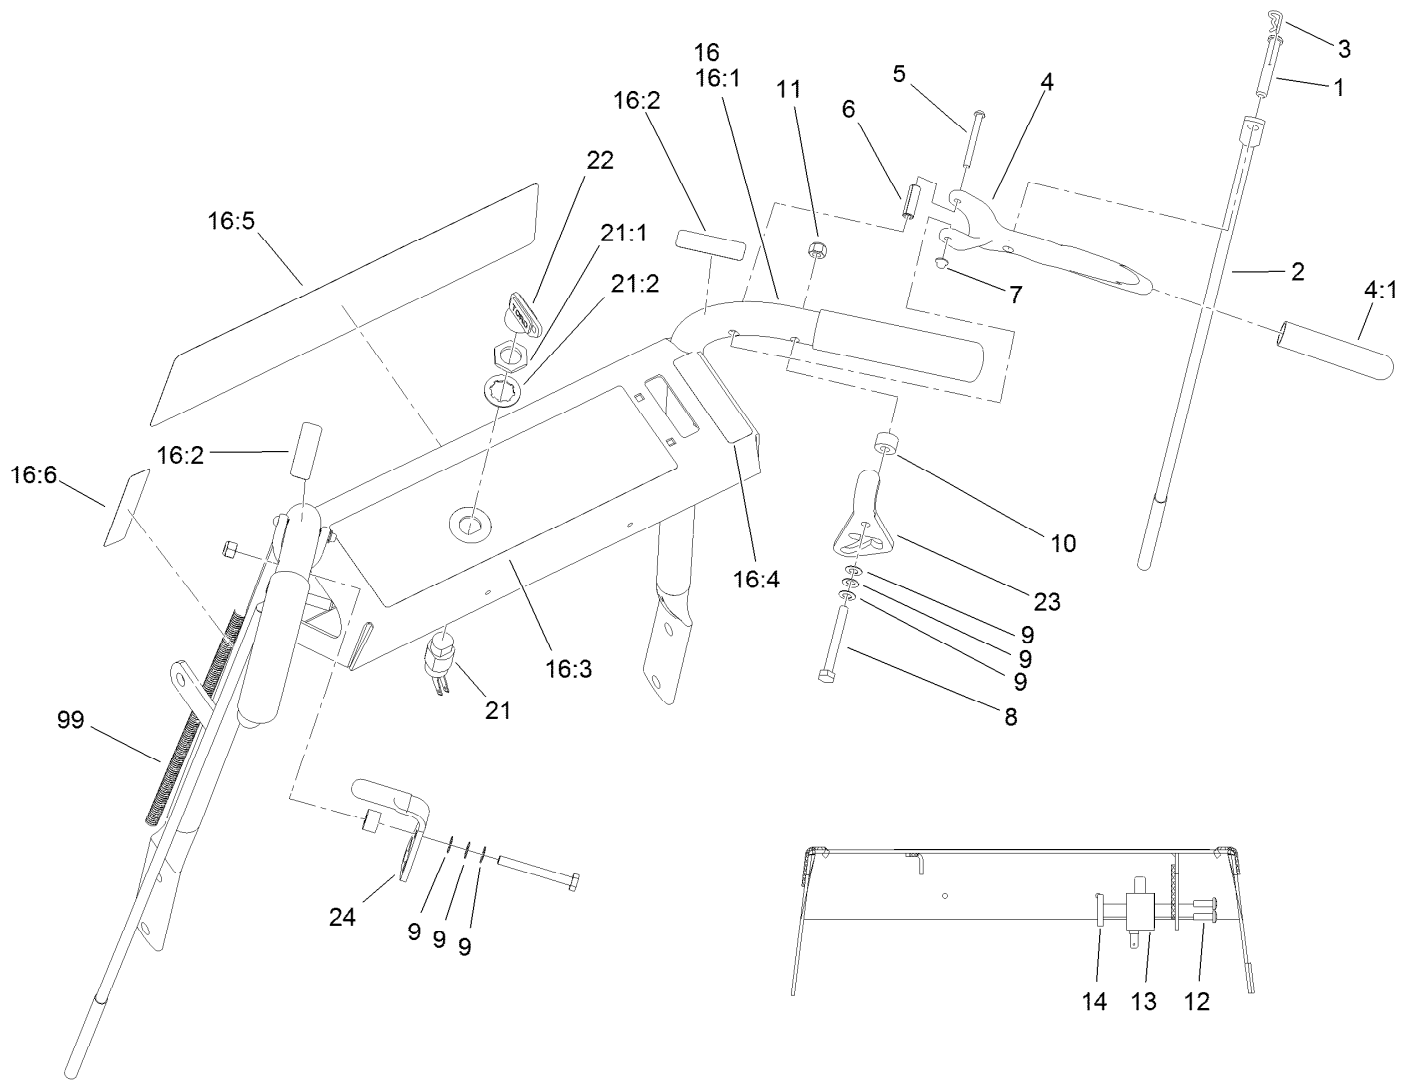


## Handle Assembly

| Ref. | Part Number | Qty. | Description           |
|------|-------------|------|-----------------------|
| 1    | 1-808286    | 2    | Pin-Clevis            |
| 2    | 1-323359    | 2    | Linkage-Wheel, Drive  |
| 3    | 1-806003    | 2    | Pin-Cotter            |
| 4    | 1-302006    | 2    | Drive Lever ASM       |
| 4:1  | 1-303021    | 1    | Grip-Lever, Drive     |
| 5    | 1-808250    | 2    | Pin-Lever, Drive      |
| 6    | 1-806340    | 2    | Pin-Roll              |
| 7    | 1-803001    | 2    | Nut-Push              |
| 8    | 321-18      | 2    | Screw-HH              |
| 9    | 1-303435    | 6    | Washer-Spring         |
| 10   | 1-323549    | 2    | Spacer                |
| 11   | 3296-42     | 2    | Nut-Lock, NI          |
| 12   | 3290-500    | 2    | Screw-PPH             |
| 13   | 1-513051    | 1    | Switch-Open, Normally |
| 14   | 1-633181    | 1    | Plate-Tapped          |

| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 16   | 119-3638    | 1    | Handle ASM               |
| 16:1 |             | 1    | Pistol Grip Handle ASM ● |
| 16:2 | 130-8371    | 2    | Decal-Lock, Neutral      |
| 16:3 | 130-8373    | 1    | Decal-Warning            |
| 16:4 | 106-2733    | 1    | Decal-Throttle           |
| 16:5 | 110-6917    | 1    | Decal                    |
| 16:6 | 95-5537     | 1    | Decal-Engage, Deck       |
| 21   | 29-5560     | 1    | Switch-On / Off          |
| 21:1 | 218-461     | 1    | Nut-HH                   |
| 21:2 | 3254-5      | 1    | Washer-Lock              |
| 22   | 63-8360     | 1    | Key-Ignition             |
| 23   | 137-9507    | 1    | Latch-RH Thumb, W/Grip   |
| 24   | 137-9508    | 1    | Latch-LH Thumb, W/Grip   |
| 99   | 116-2661    | 1    | Harness-Wire             |


● Not serviced separately

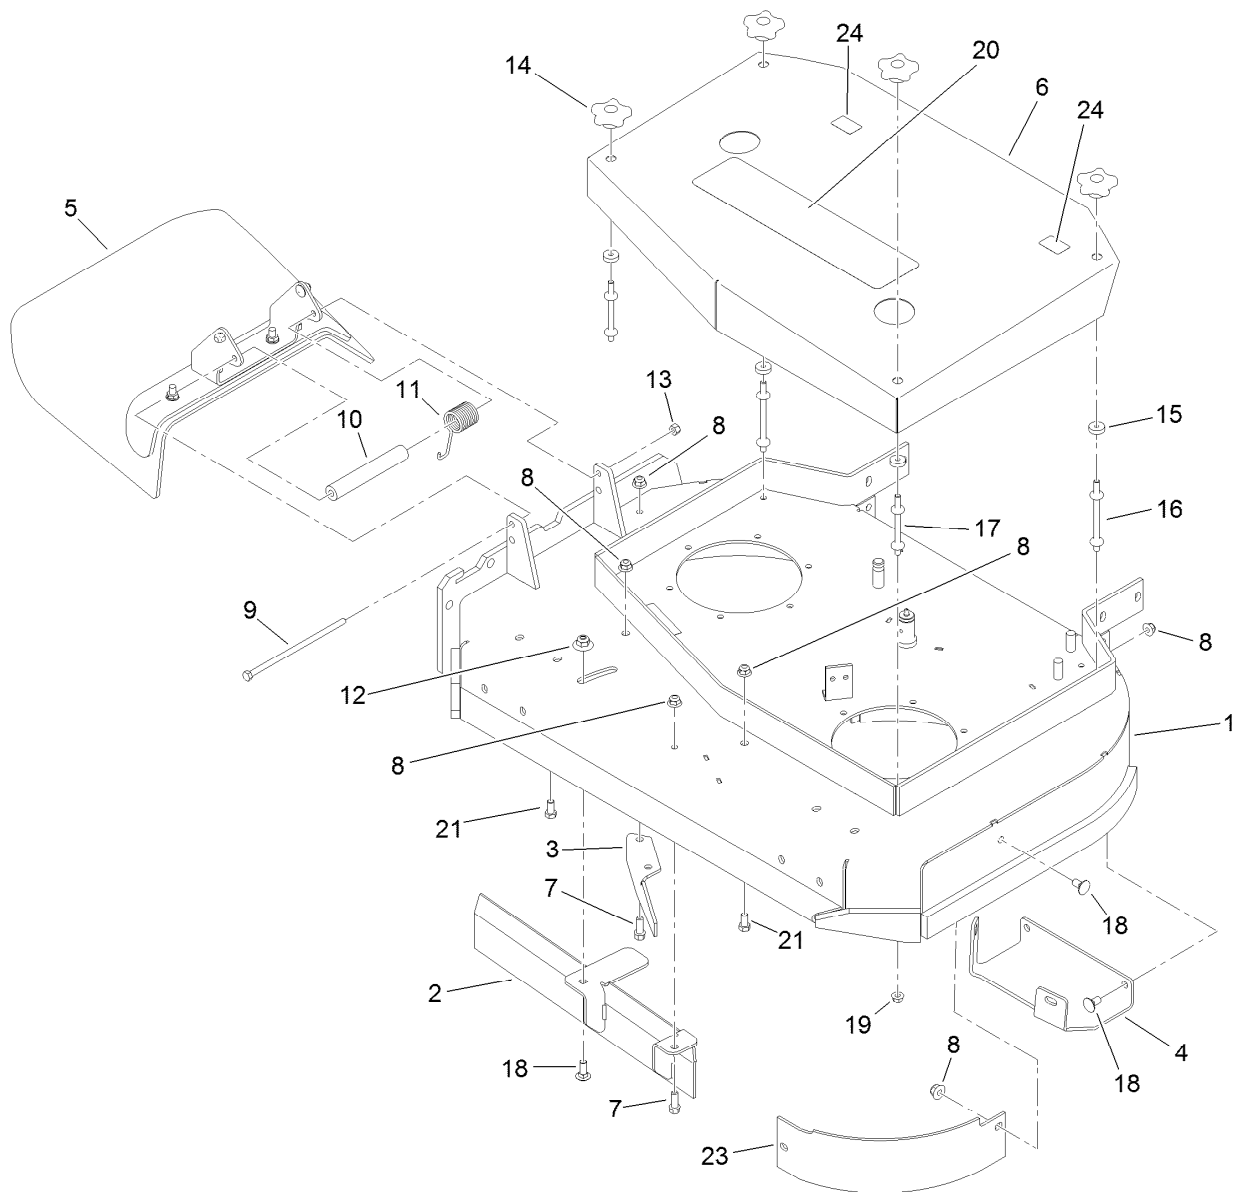

## Deck Assembly

| Ref. | Part Number | Qty. | Description      |
|------|-------------|------|------------------|
| 1    | 110-4907    | 1    | Deck ASM         |
| 2    | 121-1777-03 | 1    | Baffle           |
| 3    | 110-0754-01 | 1    | Baffle-Discharge |
| 4    | 110-2037-01 | 1    | Plate-Skid       |
| 5    | 119-6530    | 1    | Deflector ASM    |
| 6    | 110-2036-01 | 1    | Cover-Deck       |
| 7    | 92-1624     | 3    | Screw-HWH        |
| 8    | 104-8301    | 10   | Nut-HF, NI       |
| 9    | 322-50      | 1    | Screw-HH         |
| 10   | 105-4622    | 1    | Spacer           |
| 11   | 108-4052    | 1    | Spring-Torsion   |
| 12   | 109-6658    | 1    | Nut-Flange, NI   |


| Ref. | Part Number | Qty. | Description               |
|------|-------------|------|---------------------------|
| 13   | 3296-47     | 1    | Nut-Lock, NI              |
| 14   | 106-4161    | 4    | Knob-Handle               |
| 15   | 1-323417    | 4    | Washer                    |
| 16   | 1-303536    | 2    | Stud-Shield, Belt (Long)  |
| 17   | 1-303537    | 2    | Stud-Shield, Belt (Short) |
| 18   | 3231-2      | 6    | Bolt-CARR                 |
| 19   | 32128-20    | 4    | Nut-HF                    |
| 20   | 112-9710    | 1    | Decal                     |
| 21   | 323-4       | 2    | Screw-HH                  |
| 23   | 110-6903-03 | 1    | Baffle-Front, LH          |
| 24   | 106-5517    | 2    | Decal-Warning             |

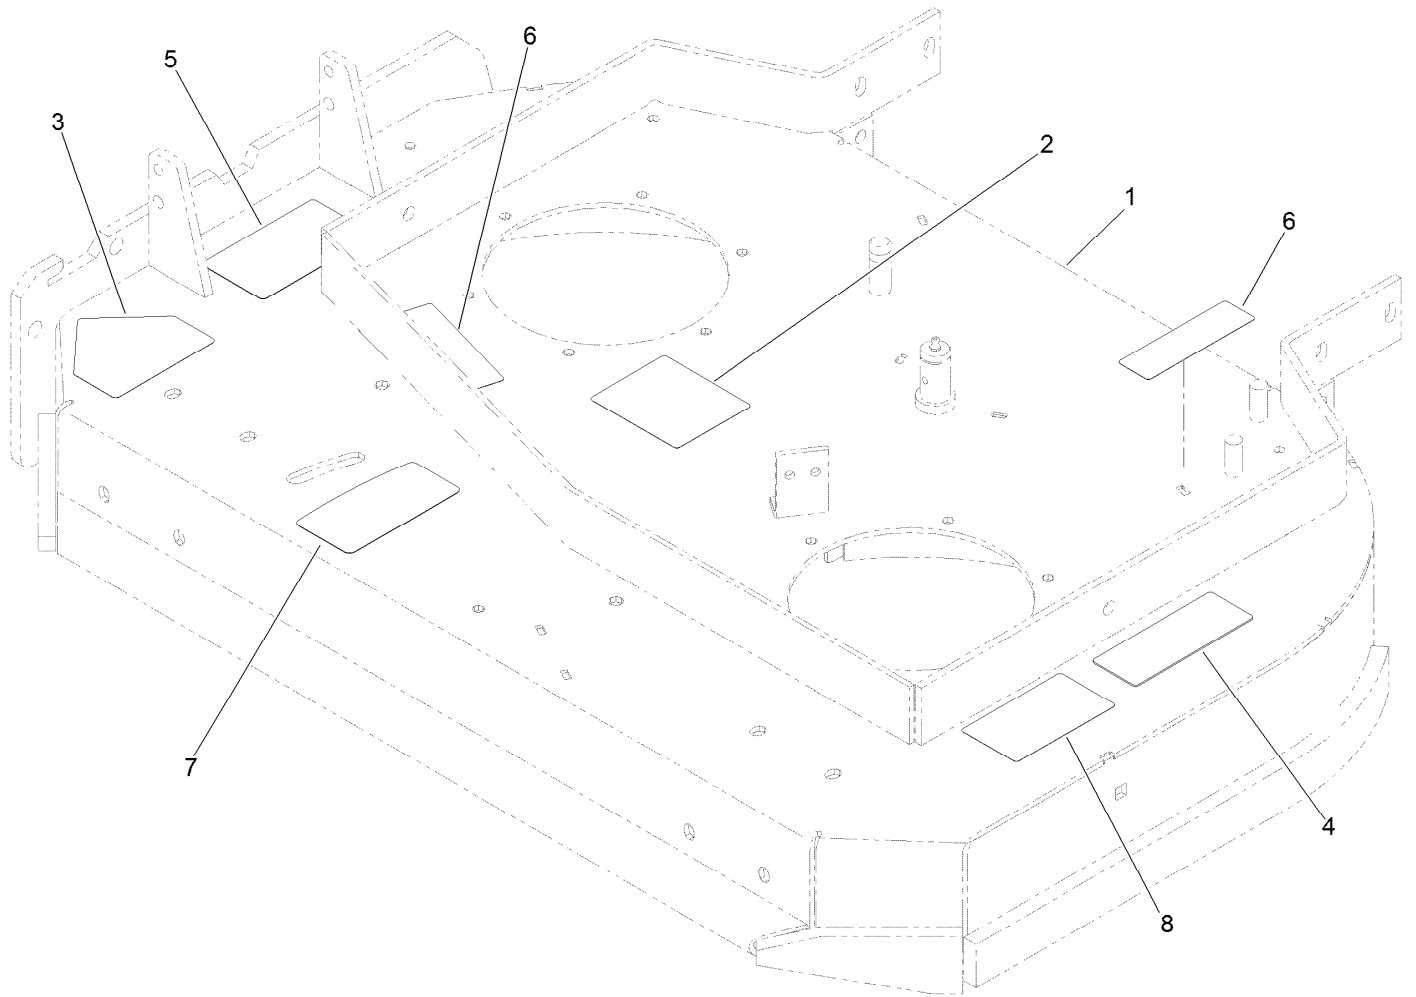

## Deck Decal Assembly No. 110-4907


| Ref. | Part Number | Qty. | Description              |
|------|-------------|------|--------------------------|
| 1    |             | 1    | 36 Inch Deck ASM ●       |
| 2    | 98-3296     | 1    | Decal-Routing, Belt      |
| 3    | 112-8760    | 1    | Decal-Danger             |
| 4    | 98-5130     | 1    | Decal-Torque, Bolt       |
| 5    | 121-6049    | 1    | Decal-Danger             |
| 6    | 112-9028    | 2    | Decal-Cover, Missing     |
| 7    | 131-1180    | 1    | Decal-Adjustment, Baffle |
| 8    | 93-7010     | 1    | Decal-Danger             |

● Not serviced separately

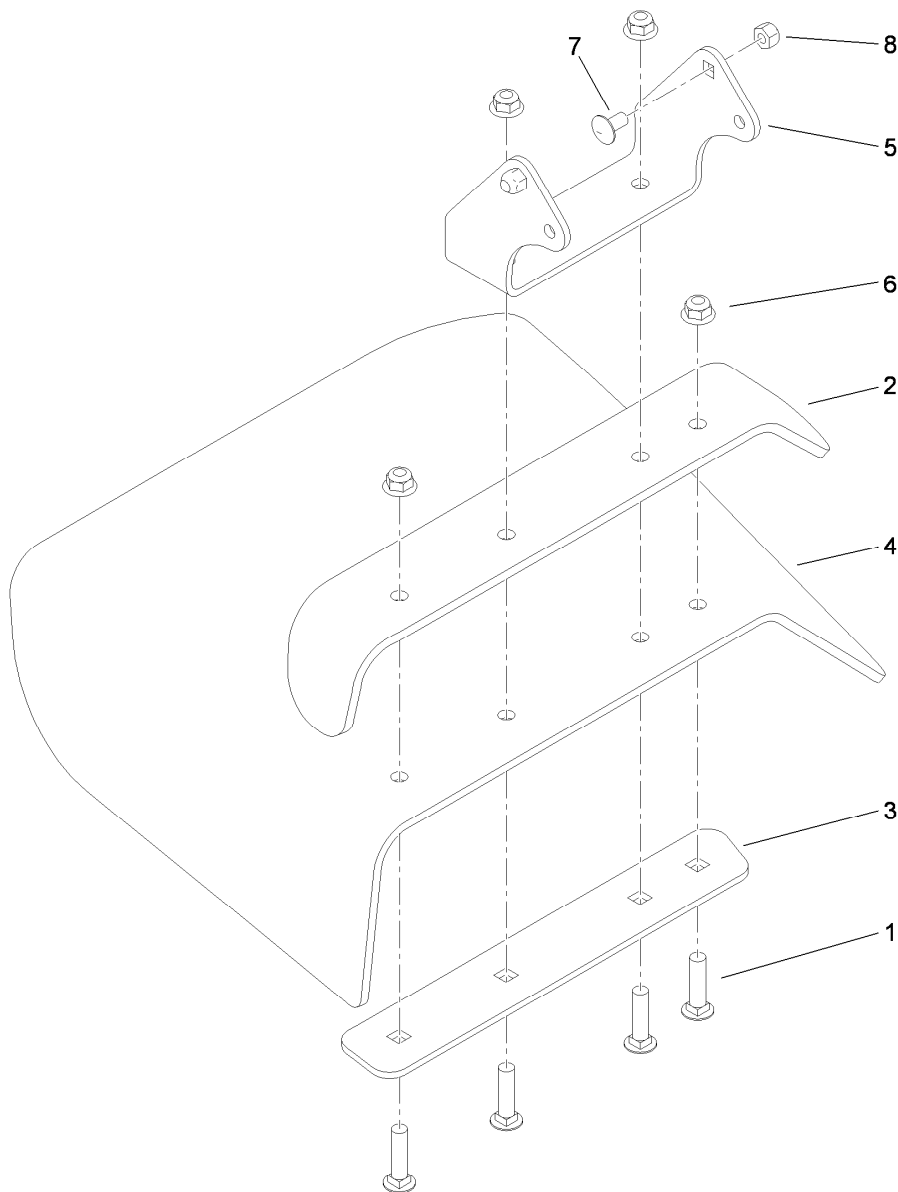

## Deflector Assembly No. 119-6530


| Ref. | Part Number | Qty. | Description                 |
|------|-------------|------|-----------------------------|
| 1    | 3231-4      | 4    | Screw-CARR                  |
| 2    | 110-0792-01 | 1    | Deflector                   |
| 3    | 110-0793-03 | 1    | Strap-Discharge             |
| 4    | 110-0791    | 1    | Deflector-Rubber            |
| 5    | 119-6532-01 | 1    | Bracket-Mounting, Deflector |
| 6    | 104-8301    | 4    | Nut-HF, NI                  |
| 7    | 3230-18     | 2    | Screw-CARR                  |
| 8    | 3296-29     | 2    | Nut-Lock, NI                |

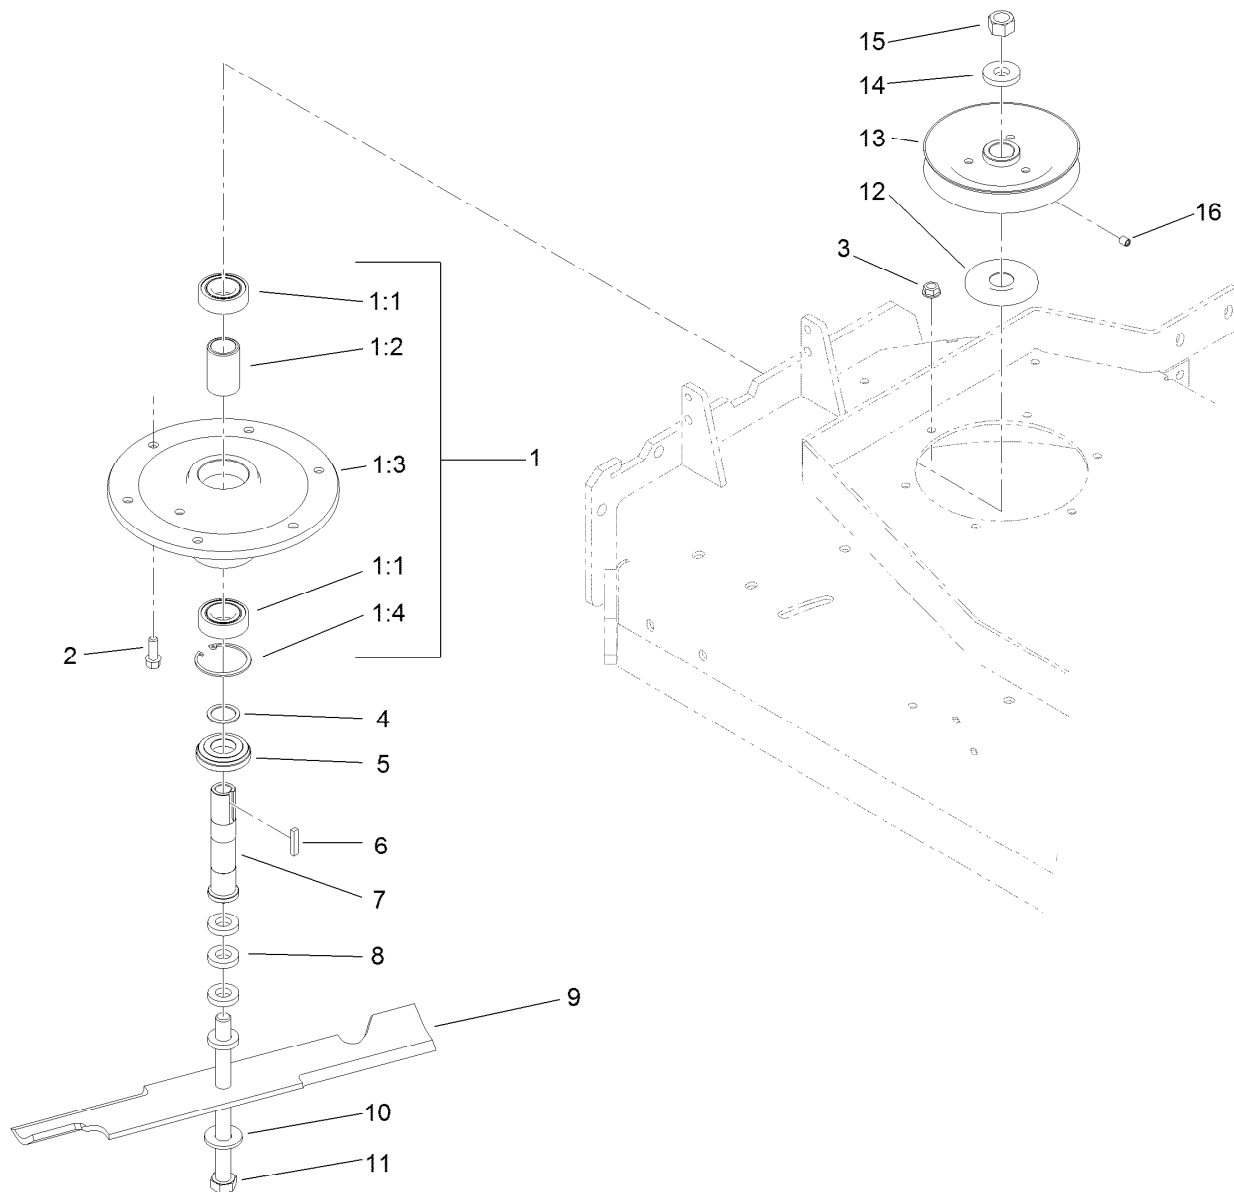

## Sheave, Spindle and Blade Assembly

| Ref. | Part Number | Qty. | Description          |
|------|-------------|------|----------------------|
| 1    | 108-6697    | 2    | Spindle Housing ASM  |
| 1:1  | 119-7857    | 2    | Bearing-Ball, 1 Inch |
| 1:2  | 110-2116    | 1    | Spacer-Bearing       |
| 1:3  | 108-6694    | 1    | Housing-Spindle      |
| 1:4  | 32120-8     | 1    | Ring-Snap            |
| 2    | 92-1624     | 12   | Screw-HWH            |
| 3    | 104-8301    | 12   | Nut-HF, NI           |
| 4    | 110-4888    | 2    | Washer-Spacer        |
| 5    | 103-2535    | 2    | Spacer-Guard, Bottom |
| 6    | 1-807267    | 2    | Key                  |

| Ref. | Part Number | Qty. | Description             |
|------|-------------|------|-------------------------|
| 7    | 1-323529    | 2    | Tube-Spindle, Short     |
| 8    | 1-323539    | 8    | Spacer                  |
| 9    | 105-7781-03 | 2    | Blade-18In, Hi Flow     |
| 10   | 1-513208    | 2    | Washer-Spring           |
| 11   | 1-800861    | 2    | Screw-Cap, HH           |
| 12   | 103-1330    | 2    | Guard-Bearing, Top      |
| 13   | 1-403183    | 2    | Sheave                  |
| 14   | 1-323339    | 2    | Washer-Retainer, Sheave |
| 15   | 3219-6      | 2    | Nut-Hex                 |
| 16   | 3246-18     | 2    | Setscrew                |

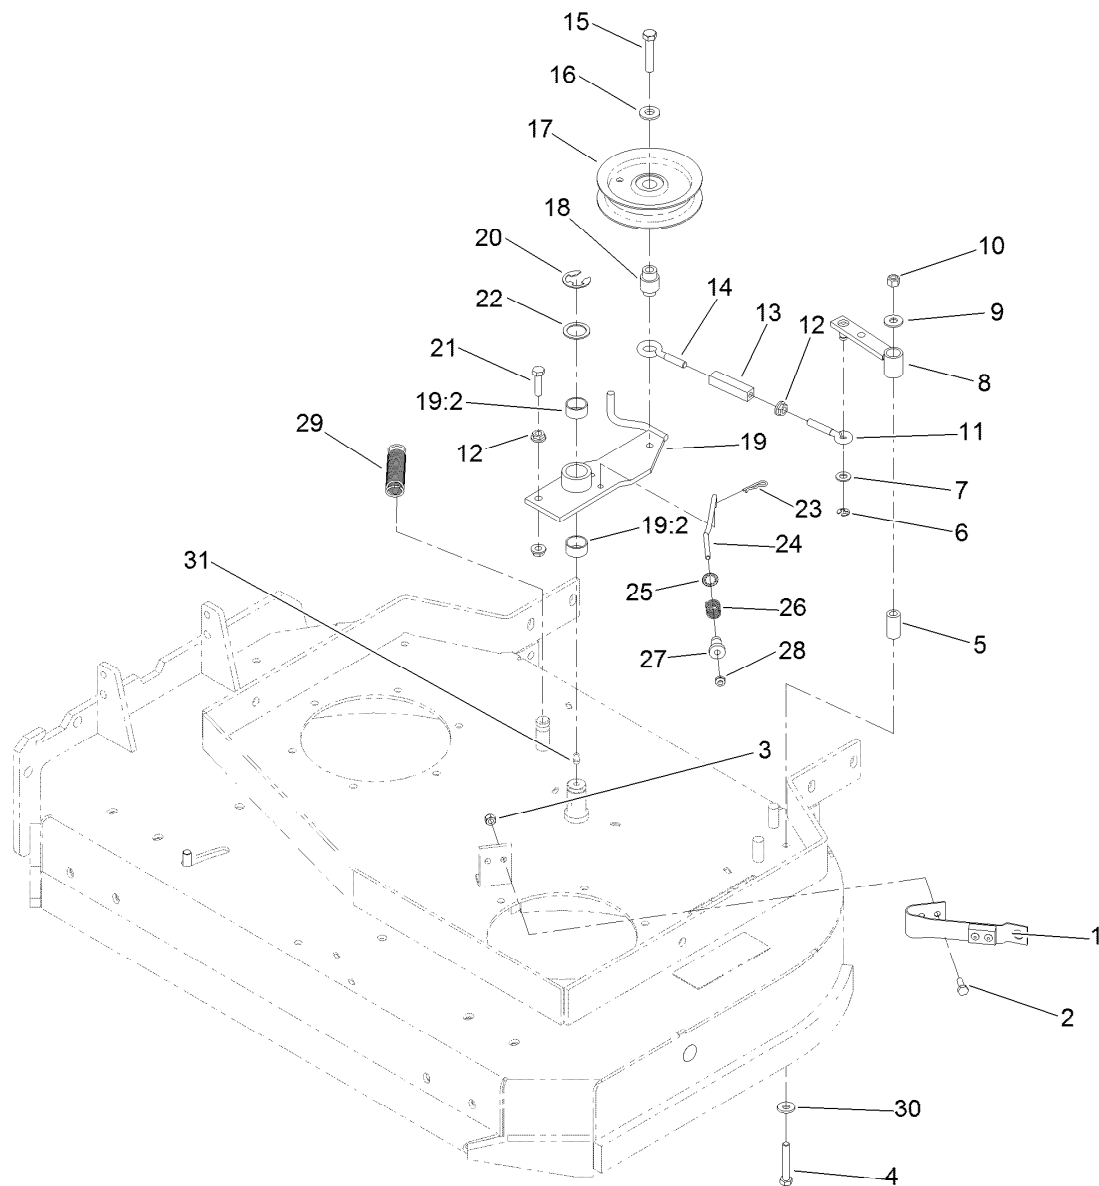


## Idler Assembly

| Ref. | Part Number | Qty. | Description         |
|------|-------------|------|---------------------|
| 1    | 1-324372    | 1    | Pad And Spring ASM  |
| 1:1  | 1-323709    | 1    | Pad-Brake ●         |
| 1:2  | 1-323710    | 1    | Spring ●            |
| 1:3  | 103-0138    | 2    | Rivet-Pop ●         |
| 2    | 321-4       | 2    | Screw-HH            |
| 3    | 3296-42     | 2    | Nut-Lock, NI        |
| 4    | 322-10      | 1    | Screw-HH            |
| 5    | 1-403179    | 1    | Tube-Pivot          |
| 6    | 32120-35    | 1    | Ring-Retaining, EXT |
| 7    | 3256-23     | 1    | Washer-Plain        |
| 8    | 1-322235    | 1    | Arm-Assist, 32/36   |
| 9    | 3256-3      | 1    | Washer-Flat         |
| 10   | 3296-29     | 1    | Nut-Lock, NI        |
| 11   | 1-303238    | 1    | Eyebolt-Thread, RH  |
| 12   | 32128-20    | 3    | Nut-HF              |
| 13   | 1-303236    | 1    | Body-Turnbuckle     |
| 14   | 1-303348    | 1    | Eyebolt-Thread, LH  |
| 15   | 702809      | 1    | Screw-HH            |

| Ref. | Part Number | Qty. | Description            |
|------|-------------|------|------------------------|
| 16   | 98-5975     | 1    | Washer-Belleville      |
| 17   | 132-4718    | 1    | Pulley-Idler, Flat     |
| 18   | 1-303434    | 1    | Bushing-Engagement     |
| 19   | 103-3600    | 1    | Idler Arm ASM          |
| 19:2 | 1-323729    | 2    | Sleeve-Bearing         |
| 20   | 32151-103   | 1    | Ring-Retaining, EXT    |
| 21   | 116-3515    | 1    | Screw-HH, Special      |
| 22   | 1-303352    | 1    | Washer-Spindle         |
| 23   | 1-806003    | 1    | Pin-Cotter             |
| 24   | 1-323715    | 1    | Rod-Brake              |
| 25   | 1-323748    | 1    | Ring-Push On           |
| 26   | 1-323747    | 1    | Spring-Compression     |
| 27   | 1-323746    | 1    | Spacer-Flanged         |
| 28   | 3296-56     | 1    | Nut-Lock, NI           |
| 29   | 1-323071    | 1    | Spring-Extension       |
| 30   | 1-303334    | 1    | Washer-Spring          |
| 31   | 302-40      | 1    | Fitting-Grease, 90 DEG |

● Not illustrated

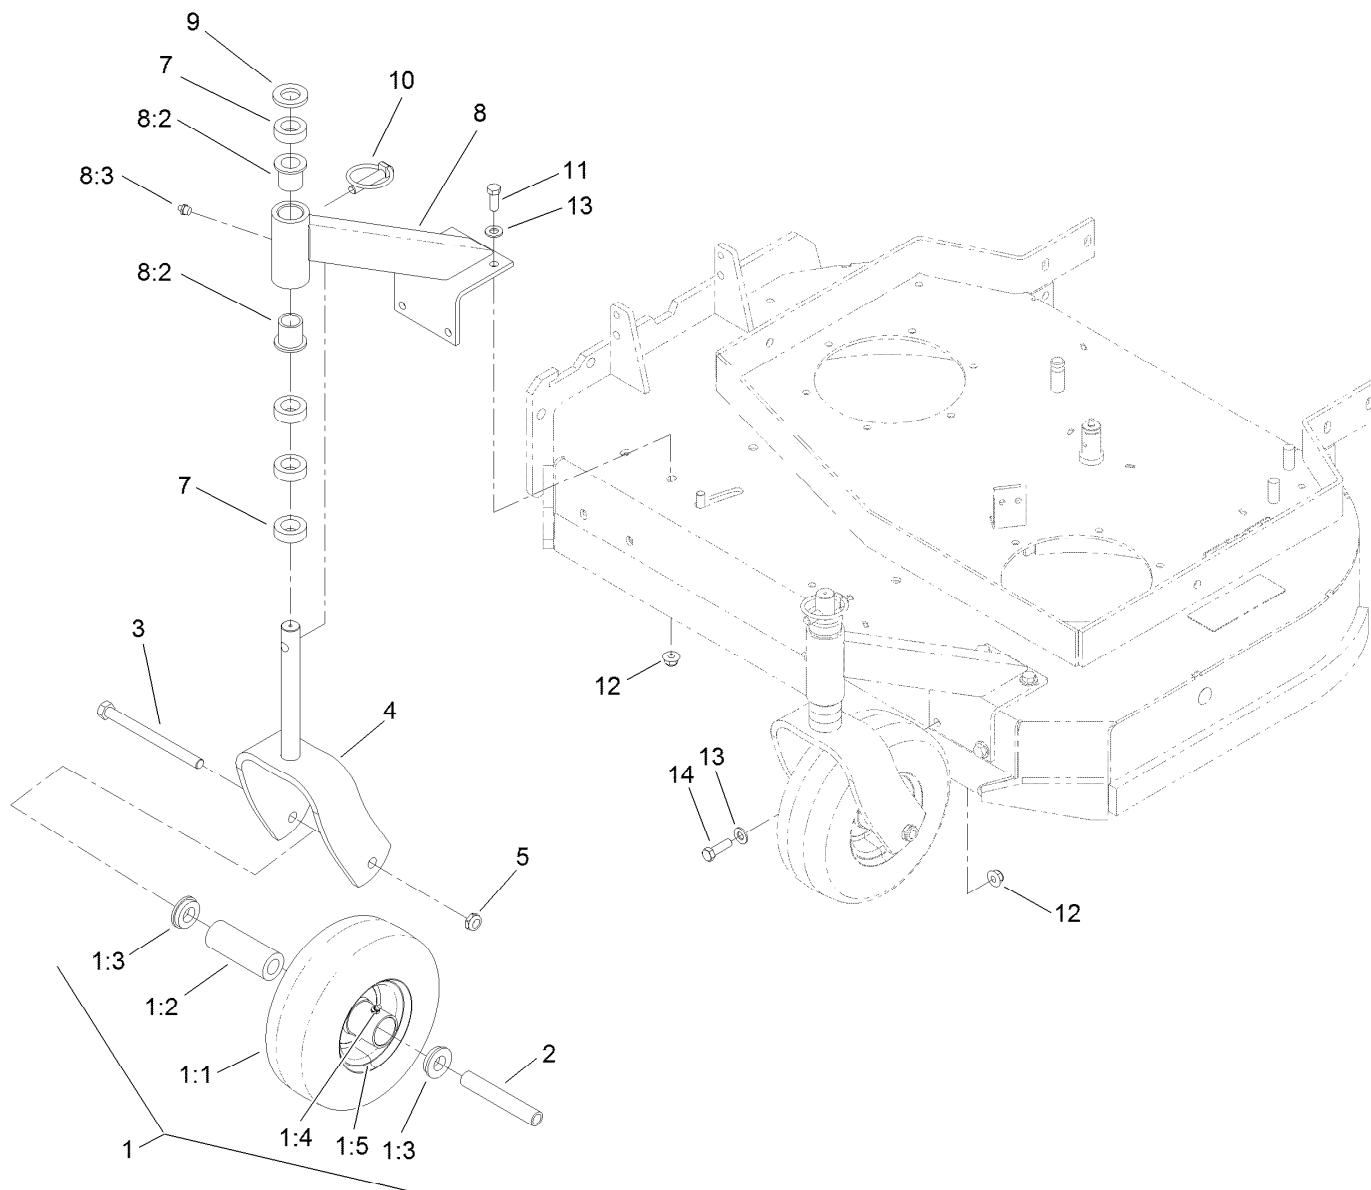

## Caster Assembly

| Ref. | Part Number | Qty. | Description        |
|------|-------------|------|--------------------|
| 1    | 130-4557    | 2    | Wheel And Tire ASM |
| 1:1  |             | 1    | Tire ●             |
| 1:2  | 1-513809    | 1    | Bearing            |
| 1:3  | 1-513810    | 2    | Bushing            |
| 1:4  | 302-61      | 1    | Fitting-Grease     |
| 1:5  |             | 1    | Wheel ●            |
| 2    | 1-513547    | 2    | Spacer             |
| 3    | 325-20      | 2    | Screw-HH           |
| 4    | 116-7942-01 | 2    | Fork-Caster        |
| 5    | 3296-45     | 2    | Nut-Hex            |

| Ref. | Part Number | Qty. | Description     |
|------|-------------|------|-----------------|
| 7    | 1-303314    | 8    | Spacer-Caster   |
| 8    | 110-2130    | 2    | Support ASM     |
| 8:2  | 1-303514    | 2    | Bearing-Flanged |
| 8:3  | 302-52      | 1    | Fitting-Grease  |
| 9    | 1-513338    | 2    | Washer-Flat     |
| 10   | 1-809020    | 2    | Pin             |
| 11   | 323-6       | 7    | Screw-HH        |
| 12   | 104-8301    | 8    | Nut-HF, NI      |
| 13   | 3256-24     | 8    | Washer-Flat     |
| 14   | 323-7       | 1    | Screw-HH        |

● Not serviced separately

## Attachments and Accessories

### For 39634 Commercial Walk-Behind Mower Fixed Deck Pistol Grip Gear Drive with 36in TURBO FORCE Cutting Unit

| Product Name                                  | Model/Part  |
|-----------------------------------------------|-------------|
| Blade-Recycler, 18in.....                     | 105-7779-03 |
| Blade-Med Flow, 18in .....                    | 105-7794-03 |
| Blade-Low Flow, 18in.....                     | 105-7795-03 |
| Blade-Atomic, 18in .....                      | 105-7796-03 |
| Blade-Hi Flow, 18in (6 Pack).....             | 108-1117    |
| Blade-Atomic, 18in (6 Pack) .....             | 108-1118    |
| Blade-Lo Flow, 18in (6 Pack) .....            | 110-0406    |
| Blade-Recycler, 18in (6 Pack).....            | 110-0408    |
| Blade-Med Flow, 18in (6 Pack) .....           | 110-0409    |
| 36in Bagger Enhancement Kit .....             | 110-2026    |
| 36in Recycler Kit.....                        | 110-2080    |
| Weight Kit .....                              | 110-2085    |
| Operator-Controlled Discharge Chute Kit ..... | 115-4190    |
| All Season Synthetic Oil (10W30, QT) .....    | 117-0066    |
| Oil Filter .....                              | 119-5852    |
| Element-Filter, Air .....                     | 120-7447    |
| Soft Bag (3 Bushel).....                      | 30104       |
| Sulky.....                                    | 30109       |
| Toro 4-Cycle SAE 30 Oil (32oz Bottle) .....   | 38903       |
| Spark Plug .....                              | 92-2153     |